



File Name: Diginet User Manual.pdf

Size: 4602 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 4 May 2019, 12:14 PM

Rating: 4.6/5 from 832 votes.

Status: AVAILABLE

Last checked: 12 Minutes ago!

In order to read or download Diginet User Manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Diginet User Manual . To get started finding Diginet User Manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

Diginet User Manual

User Guide. DigiNet. Center. CenterProgram Program It's a program that enables you watch and control the site DVR. Therefore, you don't need a. DVR to watch site DVR's image. System. Systemspec.recommendedContents. When you purchased DigiNet Center program, make sure that the following contentsDigiNet Center Program. User manual. Contents. Contents. DigiNet Center User ManualContents. DigiNet Center User ManualTableChapter 3 AppendixInternet network. Local Intranet networkLanRouterConnecting with. COM 2 terminalISDN lineThen doubleclick on folder.Select the path where you want to install DigiNet Center program and click Doubleclick DigiNet icon and run Center program.Password setup windowRefer to page 17 for password change.How. HowtotosetupConfigure system environment. Click this button.Pressing brings you to theSetupConfiguration. ConfigurationCenter system disconnect the connectionYou can only record in network drive and inHDD etc..Communication. Environment. EnvironmentThis will automatically recognize initial order fromMust set additional PPP in case of using. Modem. see Page 97 Etc.Click thisIn case either the site code or the passwordA user chooses sites of which information is to beOn choosing the site to be connected, a user selects. The window displays a progress status ofWhen a user wants to delete entered site information,When a user intends to connect to related sites again later, heIn case either the site code or the passwordA user chooses sites of which information is to beOn choosing the site to be connected, a user selects. The window displays a progress status ofWhen a user wants to delete entered site information,How. HowtotosetupClick this button.Site image will be displayed.How. HowtotosetupWhen you click the button, split modeNumber of selected. Camera. Replay split modeScreen will be empty if no image was storedThis function is to renew a graph indicationMove to selected date and initial data. Playing one picture backward. Reverse playback.<http://clevermarine-eg.com/userfiles/buddy-150-service-manual.xml>

- **diginet user manual, diginet user manual pdf, diginet user manual download, diginet user manual free, diginet user manual software.**

Stop. Forward playbackPlaying one picture forward. Move to very last data from selected date. When searching with one camera, this functionIt will thenSunset time changes in each season and the length of day time is different. Summer. Time is applied to many countries around the world, which enables you to use up theIt is done by extending and an hour when starting and delaying an hour when ending. For example, if starring time is 02 hour, then it its fixed from 02 hour to 03 hour, andRegistered imageWhen you click on image using right mouseBut HNDR SystemWhen you click on magnified image using rightThis function is to zoom in the image by usingThis is to adjust brightness of storedThis is to adjust darkness of black andThis is especially used when the color of stored imageThis function consecutively rotates directionAlso, the image can be flipped from the rotated angle. This function smoothens out the roughlyThis function is to return the controlledThis function is to get rid of noises forThis function is to flat out and rotate theControlled image from searched image isSelect your settings forIf the proper channel was not selected in the "Audio Play Configuration" window, audio is notReverse Play or Frame Play is notBackupontoFloppyDisk. DiskWhen saving images in the drive, images areTherefore, you can easily view images using normalThen below "watermark checker copy" window will appear.You need to saveThe image will be copied onto Floppy diskette in BMP or JPG format. The image willUsingwatermarkRun the watermark check program by running the file. The following image will appear. Then, the watermark program will appear as shown above. Then, the followingCorrupted image. Uncorrupted imageHowtoDrive, Remote IP Drive along with floppy disk. Therefore, you can notNetwork Drive,

Remote IP Address except floppy disk.BackupontoWindows.Windows. When formatting a CDIP address except for floppy drive. Refer to PageMpeg4 Video Codec v2ViewingAVI.<http://ahmgkj.com/upfile/buddy-125-service-manual.xml>

AVIvideoWindow, display of caption information on date,AVI backup time may differ significantly.When the basic codec provided on Window is used,DigiNet resolutionsSize of the printed imageIf it does not printHow. HowtotosetupThen, move the camera toDome camera support this function but some models willHow. HowtotosetupCamera. CamerasetupEx Parking lot, entrance etc. up to 14 characters. You can attach external sensors from 8 to 16.Ex When camera number 1 and number 2 capture anyEx If you want to store an image from number 1 cameraExternalsensorSpeaker that is located insideControlSetup. SetupEx When operating sensor number 2 while sensorEx Siren, lamp, or alarming lamp.ExternalMonitor. Monitor. External monitor is used with home TV or normal analog monitor to receive and produce image outputConsecutive Conversion Method when using models like DigiNet3416 and DigiNet34216. It might not indicate set item for external monitor.This function enables you to record any activity without the need for external sensor.You can designateBEEP sound to let you know the situation by selecting. Beep Sound Occurrence.Beep sound will not operate.You can reset the setting into the factory value.Designate full screen as motion detectionSize of image and transmitting picture quality is inEx For setting camera no.1, no.2, no.3,Put “,” after camera no.Select time of the day and select drag the area and. If you need to set minutes too, double click onThis function lets you to select by minutes instead ofTime setup selection isMotion Detection Record. Sensor Record. If sensor is captured within selected time, relatedPre AlarmCurrently selected camera willHolidaySetup. SetupAnd if theyWatermark function. If you check on hereSetupbackupAddBackup. BackupSchedule. ScheduleAfter backup data finishes the recording, this functionYou can set it immediately and from 1 hour to moreSelectingBackup. BackupMedia.

MediaIn order to do the remote backup setup, Remote PC or File Server’s IP location and password isRemote. RemoteDrive. DriveSetup. SetupMOD etc and CDRW, and NetworkWindow.HDD, MOD etc.Setup. SetupPlaying one picture backward. Stop. To the last 1 hour of thePlaying one picture forward. To the last part of theReverse playbackMultiple image zooming is not possibleDark. Bright. Default size. Zoom inConnect2WayAudioCenter to Site.Audio after connecting to site.When connecting to severalWindow.ViewlogExecute Intelli Upgrader program that was basicallyIntelli Upgrader program does not supportDatae, etc. or all files of the package folder shall beUpdate, upgrading does not support floppy diskette. Therefore, we recommend you to upgrade afterRun Health Monitor program on theAs functions that can be selected in toolbar menu are iconized,It shows connection informationsite code and site name ofAccording to “Select line type”, only connection information ofHealth Monitor program does not supportToolbarFor the purpose of remote checking ofIt releases the connection to a site. A user can set functions of Health. MonitorHealth Monitor program and the top most modelIt plays a role of directly executing CenterEmergency Monitor makes possibleAutoCheck. CheckAutoCheck. BeginCheck. CheckControls and recordSetupTabmenu. CurrentState. StateTabmenu. MemoTabmenu. SystemLog. LogIt plays a role of searching system log files recorded in a connected site andIt deletes system log files recorded into a connected site. Once a user selectsRun Emergency Monitor programEmergency Monitor program. Emergency message” set in a site when emergency occurs.ToolbarIt directly runs Center program withoutAccording to setting, the program may be. Once a user selects an emergency messageThe program is not terminated but the. Emergency window is minimized so that itMouse on it, he can resize it to its originalIt can set up functions of Emergency MonitorEmergency program.

<http://eco-region31.ru/bose-rc-9-remote-manual>

SetupWhen you select DirectX, a warning window recommending only ATI cards will appear. In

DirectX mode, 240fps display is possible. When DirectX was not selected, all cards can be applied. Select "Yes". If HWSetup file was not created on the To support WebDVR connection, the site program version shall be v4.050 or higher. When the site program is installed, the WebDVR program is also installed. Mode. Terminal Adapter for ISDN. Windows. KPPPSetup.exe in DigiNet folder of DVR and PC. The system may request you Windows98 SE. CD on the CDROM drive or HDD. If it does, CDROM or the folder that has Windows98 SE. CDROM drive. KPPPSetup.exe after finishing installation of a DigiNet center and site. Manual ISDN. ISDNSetup. Setup without ISDN among the dialup servers. Formatting and Backup Using. Using Direct. Direct CD Following procedure is based on Direct CD v5.1. If any other message appears Formatting Using. Using In CD Click on the "Next" Click on the "Next" button. Click on the "Next" button. After entering the CD name, click on the "Finish" button. MOD, ORB, etc. Refer to Page 28. System Setup. Setup for Audio Function. Function Soundcard mixer is installed Controls'. In other words, This product has passed thorough quality control and test, and if this get broken during normal Warranty Guide Warranty Content If the customer wants to get it repaired, Product Warranty Service Sheet. Product Serial Number. Distributor. Date you purchased. Warranty Period. Customer Name. Address. Kodicom Co., Ltd. Address 5ch floor, A Dong, SK Twin Tower, 3459, Kasan Dong. KeumcheonKu, Seoul 153023, Korea. Homepage www.kodicom.com. Korea Digital Communication Co., Ltd. This allows the white LED indicator to be easily seen during setup. If the dimmer has been powered up for MORE THAN 15 MINUTES see A2 below.

<http://www.philipsong.com/images/Dell-Powerededge-830-User-Manual.pdf>

This indicates that the dimmer is now in Setup Mode Go to the relevant setup function instructions
This indicates that the dimmer is now in Setup Mode Go to the relevant setup function instructions
However, some lamps can become unstable at low dimming levels, in particular CFL's. The setting is automatically saved to all other devices connected in parallel Therefore, when setting up maximum brightness, it is recommended that the lamp is slowly dimmed up to a point where no further changes in brightness can be seen, and the maximum level set at this point. These lamps require the dimmer output to be set to 50% for 0.2 of a second when the lamp is turned on. This ensures the lamp strikes successfully. To enable Kick Start Mode, follow the steps below. Note this also applies where two way switching operation is required. This is covered in Step 4 below. It turns back on to level set in step 4 above. If the dimmer has been powered up for MORE THAN 15 MINUTES see A2 below. This indicates that the dimmer is now in Setup Mode Go to the relevant setup function instructions
This indicates that the dimmer is now in Setup Mode Go to the relevant setup function instructions
However, some lamps can become unstable at low dimming levels, in particular CFL's. The setting is automatically saved to all other devices connected in parallel Therefore, when setting up maximum brightness, it is recommended that the lamp is slowly dimmed up to a point where no further changes in brightness can be seen, and the maximum level set at this point. These lamps require the dimmer output to be set to 50% for 0.2 of a second when the lamp is turned on. This ensures the lamp strikes successfully. To enable Kick Start Mode, follow the steps below. By default, the white LED indicators are set to glow on when the dimmer is turned off. This can be useful as a nightlight. To set the LED indicators to turn off when the dimmer is off, follow the steps below.

<http://ersanteknoloji.com/images/Dell-Powerededge-750-User-Manual.pdf>

However, some lamps for example, nondimmable CFL's can flicker when switched OFF by pressing the dimmer's push button. Note this also applies where two way switching operation is required. When used in the Separate Switch Mode, the dimmer turn on level needs to be set. This is covered in step 4 below. By default, the memory dimmer option is disabled. Then, by default, when the connected lights are off and the button is tapped, the lights will switch on at maximum brightness. However, pushing and holding the button when the connected lights are off will dim the lights up from the minimum level. To enable or disable the memory dimmer function, follow the steps below. Program It s a program that enables you watch and control the site DVR. Therefore, you don t need

a DVR to watch site DVR s image. DigiNet Center Program User manual Web DigiNet Manual. Web DigiNet Setup.80. Web DigiNet installation Web DigiNet Connection setup.84 Then doubleclick on folder. DigiNet check the password when it starts. It doesn't have a password as a default. Password setup window. Caution It is impossible to change password when you forgot it. Please write it down on other place. We recommend that the administrator to change password. Refer to page 7 for password change. Applicable storing media. You can only record in network drive and in drives which can support the following; Hard disk or remote drive DVDRAM, ZIP, MOD, ORB, USB HDD etc.. Click this on the initial screen. Execute KPPPSetup.exe. You need to reboot the system when the PPP setup is done. After you finish the installation of modem, click KPPPSetup.exe in DigiNet folder of DVR and PC. This program may not work properly when the system doesn't have a modem installed. Any window of Network properties or dialup server properties should not be open before executing KPPPSetup.exe Do not execute KPPPSetup.exe twice at one instant. You should wait until you see a message that your system will reboot.

On DigiNet communication setup of site software select LAN. Please check after installation if the connection works well between center and site. In that case please follow this step. When the ISDN modem supports a few dialup servers you should select a proper dialup server that supports ISDN among the dialup servers. Choose PPP Internet, Windows NT server, Windows 98 on Server Type. Check Enable Software Compression and Require Encrypted Password and click Apply button and OK. From Modem register information window, Select for maximum speed if PSTN Select 500 for maximum speed if ISDN For safety of communication line, modem for center and site should be set to equal. Connection may not work well if something like noise and old line etc. This button plays the current image. Below message will appear if you didn't select the camera. Designated number is not the number of image but it is an internal value for the DigiNet program. Basically zooming a small image gets a little bit distorted image. But DigiNet System has developed own compression engine code KEngine CODEC to minimize this problem. Zooming in and out is applicable to only one camera. Then Data Backup window will appear. Then below watermark checker copy window will appear. If you click Yes for the selected image, Watermark check program will backup to a Floppy Diskette. You can backup the single images as many as you want on a floppy disk, however, you only need to store the watermark check program once. The image will be copied onto Floppy diskette in BMP or JPG format. The image will be copied with the watermark checker program to check to see whether the image was illegally modified or not. 34 Using Using watermark watermark checking checking program program Run the watermark check program by running the file WMChecker.exe on the floppy disk. If you click File Open button, below widow will appear to check authentication of the image. 35 Once opened the name of the file will appear in the window.

Select Watermark check to verify the image. Once verification has been completed windows similar to those below will appear. Therefore, you can not check the data using the normal image so you have to use it with the software from the place you bought it from. This is used when you select CD to backup data. If CD was not formatted, use Direct CD program for CD formatting process. Time has to be setup before the current time. Wait until the processing work is done; start the backup after current backup and waiting data have finished their backup. Approximate time to format CDR min, CDRW 545 min When the CD is formatted, follow the same instructions to HDD or removable drive DVDRAM, ZIP, MOD, ORG etc to backup your data. To activate GoTo function you need to click, then setup button will look like this. You can attach external sensors from 8 to 6. If the related external sensor starts working, connected camera starts recording. Input the sensor number you wish to use Sensor number that s related with each camera. If there are a few cameras, you can separate by comma. This is not required on motion detection mode. From Recording Schedule tap, record setting must be under Motion Detection mode for inputted specific camera number. If it is set on Continuous recording, this function is not activated. Input camera number of related camera that will detect and record related motion at the same time. Speaker that is located inside the system will

let you know site's situation by the sound. Ex Siren, lamp, or alarming lamp. Beep sound will not operate. Screen quality improves as you set to higher value but file size per screen frame will increase. Default value is Normal. Enter camera number. Rotation time should be set. Caution Be careful not to set above value as 0 second. If you need to set minutes too, double click on corresponding time and you will see a picture that looks just like below. Drag either to left or right.

After choosing day and time from selected camera, selecting more than record mode will change selected time setup within selected time. Sensor setup can be done by camera and use time. If sensor is captured within selected time, related camera's image will be recorded or related control will operate. Sensor input signal will be ignored if anything occurs outside the setup time. If the corresponding camera or time is set to Continuous Record, you cannot use Pre Alarm function. View more Table of Contents Table of Contents Software Installation. The manufacturer reserves the right to revise and improve its products. All specifications are therefore subject to change Insert the enclosed CD, and go to CDROM Drive User's Manual. Revision2 User's Manual Instruction User's Manual System Requirements Your system must meet the system requirements User's Manual Operation Manual It has an embedded Users Manual V2.0 Start in order beginning with the drivers. When you install the drivers Setting the Receiving PC for Direct Upload. 148 For Windows. 148 For Macintosh. Users's Guide This manual applies to ivms4500 Windows Mobile mobile client software, please read it carefully Before Using This Machine. Starting a Meeting. What You Can Do During the Meeting Please start by reading 32.1 User Guide The reader should HIKVISION disclaims Installation Manual. DRMU000840 April 2005 Rev. H H ISSUE DATE REVISIONS A October 2003 Initial Release PCN 1602 B November 2003 Added instructions for loading software This guide assumes that you have a user account for your Remote Access service. Note To obtain a user account, contact User Manual V2.0 IPSe8X IPSe16X IPSe32X NVSe8X NVSe16X NVSe32X NVSe64X Please carefully read these instructions before using this product. Save this manual The Modem Setup window will appear. If the modem setup is not properly completed communication between With products, clear Notice This user manual is an operation Backup Service. Software Manual.

Powered by The most common reason a networked Brother machine may stop printing, is because the connection between the computer and the Brother machine Backup Service. Software Manual. Powered by SWRADIUS 27492AE 27492AE Please carefully read these instructions before using this product. Save this manual for future use.Licenses Notice. Introduction TC200 User's Guide To use this website, you must agree to our Privacy Policy, including cookie policy. As a result, the web page can not be displayed. Cloudflare monitors for these errors and automatically investigates the cause. To help support the investigation, you can pull the corresponding error log from your web server and submit it our support team. Please include the Ray ID which is at the bottom of this error page. Additional troubleshooting resources.

<http://www.bosport.be/newsletter/bose-rc-9-remote-manual>