

Directv Sat Go Manual



File Name: Directv Sat Go Manual.pdf

Size: 3502 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 23 May 2019, 18:43 PM

Rating: 4.6/5 from 705 votes.

Status: AVAILABLE

Last checked: 8 Minutes ago!

In order to read or download Directv Sat Go Manual ebook, you need to create a FREE account.

[Download Now!](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Directv Sat Go Manual . To get started finding Directv Sat Go Manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

Directv Sat Go Manual

It is recommended that you charge the batteries overnight before the first use. The slot also contains a RESET button. 4. TV Connector Panel 5. DC Power Connector 6. DIRECTV Receiver Panel 7. TV Display Panel This is used for pointing the antenna for the strongest possible signal. In live TV, changes the channel up or down; in the Menu or Guide, scrolls up or down. 6. SELECT Selects the item highlighted. 7. ARROW Moves the highlight bar left or right to move through the onscreen menus. 8. ACTIVE Displays the DIRECTV Interactive Home Page—local weather and more! 9. INFO Displays the channel banner or info to a highlighted program or channel cell. We require a landbased telephone connection to communicate periodically with your TV. 3. USB Port For future use. 4. SERVICE PORT RS232 Used as a service port for upgrading the DIRECTV SatGo software. 5 AV OUT Composite video and audio output Connects the TV to equipment with a composite AV input, such as a VCR or DVD player. 6. AV IN 1 Composite video and audio input Connects the TV to equipment with a composite AV output, such as a VCR or DVD player. 7. COMPONENT AV IN 2 Component video and audio input Connects the TV to equipment with a component AV output, such as a DVD player. Some function can also be adjusted with the buttons on the TV display panel. You can always press EXIT to return to video. Some function can also be adjusted with the buttons on the front panel of the LCD. You can always press EXIT to return to video. The power light will also blink every second for 10 minutes before switching the DIRECTV SatGo to standby mode automatically. Battery usage time is about 1 hour; battery charging time is about 8 hours. A full charge can take as much as 8 hours. It is recommended that you charge the batteries overnight before the first use. Strong impact on the TV may cause operation failure. Select the most appropriate procedure depending on your requirements. <http://www.x-wing.co.kr/upload/camara-minolta-xg1-manual.xml>

- **directv sat go manual, directv sat go manual free, directv sat go manual online, directv sat go manual pdf, directv sat go manual download.**

A suitable site requires the antenna have an unobstructed view of the southern sky and a flat, stable surface. This means if you live in Miami, you must have a clear line of sight to the southwest; if you live in San Francisco, you must have a clear line to the southeast. Southern states point more toward 60 degrees; northern states point more toward 30 degrees. A residential DIRECTV dish can also be connected via an optional RG6 cable for inhome viewing. The AC power cable is permanently connected to the receiver. 2. Remove the soft plastic cover plug from the top of the case and lay the AC power cable into the provided groove. 3. Plug the AC power cable into a grounded 3prong outlet. 4. Replace the cable cover. The DC power cable is not permanently connected to the TV. The DIRECTV SatGo TV will turn on. 3 Simply follow the onscreen directions to complete your setup functions. You'll be guided through various selections and functions for setting up and optimizing your antenna signal and setup — including positioning your antenna and a system test. To dismiss the screen saver and return to what you were doing, press any key on the remote. Burnin may cause permanent damage to your TV and DIRECTV is not liable for any damages that may be caused to your TV. If the antenna is not aligned to the satellite, a message displays on the screen, "Searching for Satellite." You can easily realign the antenna using the Signal Strength Meter. If you need additional support, you can use antenna coordinates to help you point your antenna towards the satellites. Only if you leave the region would you have to reenter your ZIP code to get the coordinates for the new location. You can use these coordinates when aligning your antenna to the satellites. 1. Turn on the DIRECTV SatGo, press the POWER button on the TV display. 2. Select Repeat Satellite Setup in the Satellite menu. The ANTENNA INSTALLATION screen menu appears.

3. Select the antenna type Round 1 or 2 LNB.

4. http://epplast.ru/files/camara-sony-cyber-shot-8_1-megapixeles-manual.xml

Enter the ZIP code of your location. Select Continue and then select Signal Meter. The appropriate direction azimuth and angle elevation display on the screen. 5. Write down the antenna coordinates that display Direction and Angle on the line below each illustration. An audible beep sounds and the beeps become faster as your signal strength becomes stronger. d. Once you scan and obtain the optimal signal strength 60-70%, stop. Write down the actual angle and duration from the compass on the compass label included with the DIRECTV SatGo. Moving the antenna after attaining signal lock may cause the antenna to lose signal lock and require you to realign the antenna. They might not work or could cause additional DC drops and signal amplitude attenuation. Note that the back panels of your equipment may not exactly match those illustrated. Always match the color of the plug to the same color of the jack. Post in the comments. CAUTION There is a danger of explosion if batteries are incorrectly replaced. Replace only with same or equivalent type. Always unplug your DIRECTV SatGo system before moving it. Burn-in is not covered by the warranty. The LCD Panel consists of 3 million cells. The following items are included with your SatGo portable TV and antenna. TV and Receiver. DC Cable. Phone Cable. Screwdriver. TV Receiver. An integrated TV receiver is stored inside the DIRECTV SatGo case. TV Front View. TV Display Panel. TV Receiver Panel. We require a land-based telephone connection to communicate periodically with your TV. 3. USB Port For future use. Remote Control. Some function can also be adjusted with the buttons on the TV display panel. All the functions for TV mode can be controlled with the Remote control. Some function can also be adjusted with the buttons on the front panel of the LCD. Find that the remote control is no longer operating correctly. Inserting Battery into the TV. Find that the DIRECTV SatGo TV is no longer operating correctly.

Select the most appropriate procedure depending on your requirements. Finding a Suitable Antenna Site. The DIRECTV SatGo comes preassembled with the Antenna cable connected to the SAT connector on the TV rear connector panel and to the SAT connector on the rear antenna base. For DC power. Press TV POWER ON. The DIRECTV SatGo TV will turn on. Simply follow the onscreen directions to complete your setup functions. Antenna coordinates Direction and Angle numbers are based on the ZIP code of your location. You can use these coordinates when aligning your antenna to the satellites. 1. Turn on the DIRECTV SatGo, press the POWER button on the TV display. You have now successfully set up the DIRECTV SatGo and are receiving the DIRECTV satellite signal. 3. On the Signal Strength screen, Highlight Done and press SELECT. Note If this is a new setup, the Receiver will gather satellite information for a few minutes. Note that the back panels of your equipment may not exactly match those illustrated. NOTE Not all cables come with your DIRECTV SatGo you may need to purchase additional cables depending on your setup. Component Connection Best Quality. Completing the Connections. Plug all power cords into electrical sockets. Then go to Setup and press SELECT. To access the channel of your choice, simply key in its numbers on your remote control the channel will appear in a few seconds, or press ENTER after the numbers and it will appear right away. You can also navigate to different channels through the Guide. Press MENU to see Guide options, change your Favorites list, or jump to a desired date and time. Tune to a pay per view program or press INFO on a highlighted pay per view program. Select a Buy option and follow the onscreen instructions. Picture. Picture Mode. NOTE This is typically used for content that is natively displayed in Widescreen format. Backlight Brightness. You can easily adjust the brightness of the Liquid Crystal Display LCD.

<http://www.bouwdata.net/evenement/boss-dd-20-giga-delay-manual>

1 Press Menu to display the TV Menu option Low High. Internal Battery. Parental Controls. This feature allows you to block certain channels or programs so children cannot view programs that are not age appropriate. NOTE This Parental Controls menu is adapted to external input AV IN 1. When the input is DIRECTV, this menu is deactivated. The System Test option lets you run a test on the

tuner, access card, receiver ID and phone line. To temporarily change the audio, from the Menu, select Audio Options, then select the audio track you prefer. While in the Guide, press Channel or News. Your search will be quicker if you narrow your search by selecting subcategories; just follow the onscreen instructions. Guides number of days of programming supported by your TV will appear on your list. DIRECTV Messages. Use Block All or Allow All to save time if you wish to affect a large number of channels. Spending. From the left menu, select Spending, then set your preferred spending limit for any single pay per view purchase. You'll be directed to create a passcode which you'll want to make Control icon in the Channel Banner will tell you if the receiver is locked, temporarily have Parental Controls set and temporarily unlocked, turning the TV power off will relock the box. TV Menu. If problems persist, turn off all equipment that is connected to your DIRECTV SatGo system, wait a few minutes. Problems with Caller ID. Try another channel. Press the TV INPUT key on the remote control to make sure that the TV input is set to DIRECTV. Press the POWER button on the front of the TV. Press the RESET button behind the access card door on the TV receiver base. Try replacing batteries. If you're entering a channel number that is less than four digits long, the TV might wait two seconds before tuning to the channel. Press ENTER after entering a channel number to tune immediately.

<https://jdleducation.com/images/Digital-Camera-Service-Manual.pdf>

It will also allow you to get your access card and receiver ID numbers or to initiate diagnostic procedures on your TV. First make sure that. All connections jacks, cables, etc. are in place correctly. Who is Covered You must have proof of purchase to receive warranty service. Reception transmission problems caused by signal conditions, telephone line, or cable or antenna systems outside the unit. Connect the equipment into an outlet on a circuit different from that to which the DIRECTV SatGo system is connected. Item DIRECTV SatGo unit Dimensions Type Display Area LCD Panel Max. Resolution Viewing Angle Satellite In Phone Jack USB Service Port AV Out AV In 1. This product incorporates equipment attached to the receiver. State VA VT WA WA WI WI WV WY City Roanoke Burlington Seattle Spokane Madison Milwaukee Charleston Cheyenne Direction 22 23 13 14 20 20 22 16 Angle 42 32 32 33 39 39 41 42. Very often issues with DirecTV SAT GO begin only after the warranty period ends and you may want to find how to repair it or just do some service work. Even oftener it is hard to remember what does each function in Satellite TV System DirecTV SAT GO is responsible for and what options to choose for expected result. Fortunately you can find all manuals for Satellite TV System on our side using links below. What is Covered 58 What is Excluded. Make Sure You Keep. Before Requesting Repair Service. 59 To Get Warranty Service. To Get OutofWarranty Service. Product Information DIRECTV Protection Plan 60 FCC Customer Information Other Information 62 Specifications 65 DishPointing Coordinates. Meaning of symbols printed on the rear panel of the product The "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

<https://codicicolori.com/images/Digital-Camera-With-Full-Manual-Mode.pdf>

The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. Important Safety Instructions 1 Read these instructions. 2 Keep these instructions. 3 Heed all warnings. 4 Follow all instructions. 5 Do not use this apparatus near water. 6 Clean only with dry cloth. 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus including ampli. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not. Servicing is required when the apparatus has been damaged in any way, such as powersupply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the

apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. 15 Do not place anything heavy, wet or magnetic on the TV or the power cord. Never cover the ventilation openings with any material and never touch them with metallic or in. W ARNING T o reduce the risk of. The apparatus shall not be exposed to dripping or splashing and that no objects. CAUTION There is a danger of explosion if batteries are incorrectly replaced. TIP We highly recommend plugging the DIRECTV SatGo system into a surge protector to prevent damage from. Opening or removing covers may expose dangerous voltage or other risks, and incorrect reassembly can cause shock when receiver is subsequently used. Attempted selfrepair may also void your warranty. For your information The identi. Certain operating conditions, such as the continuous display of a static image over a prolonged period of time, can result in phosphor burn if proper precautions are not taken.

To protect your investment in this LCD, please adhere to the following guidelines and recommendations for minimizing the occurrence of image burn. 1. Display a moving image whenever possible. 2. Always power down the LCD when you are. Burnin is not covered by the warranty. It is therefore possible that a few cells might be awed. We allow a maximum of 6 defective cells for the device to be in proper running order. Please recognize that a device with 6 or fewer defective cells cannot be exchanged or refunded. IMPORTANT This device incorporates an anticopy process technology that is protected by U.S. patents and other intellectual property rights. The anticopy process is licensed for noncommercial, home use only. Reverse engineering or disassembly is prohibited. Unauthorized changes or modi. TV Rear View TV Front View 1. Cable Compartment The Cable compartment stores the AC power cable permanently attached. 2. Remote Control 3. Access Card Slot The DIRECTV access card is preinstalled. We require a landbased telephone connection to communicate periodically with your TV. 3. USB Port For future use. 4. SERVICE PORT RS232 Used as a service port for upgrading the DIRECTV SatGo software. 5 A V OUT Composite video and audio output Connects the TV to equipment with a composite A V input, such as a VCR or DVD player. 6. A V IN 1 Composite video and audio input Connects the TV to equipment with a composite A V output, such as a VCR or DVD player. 7. COMPONENT A V IN 2 Component video and audio input Connects the TV to equipment with a component A V output, such as a DVD player. NOTE To use your remote control in DIRECTV mode, the MODE switch on the remote control should be set to the DIRECTV logo. You can always press EXIT to return to video. NOTE To use your remote control in TV mode, the MODE switch on the remote control should be set to TV. You can always press EXIT to return to video. Don't mix used batteries with new batteries.

Remove batteries when you don't use the remote control for long periods. Liquid leakage from old batteries may cause operation failure. Make sure there are no objects between the remote control and its sensor. Don't place the remote control near a heater or damp place. Strong impact on remote controller may cause operation failure. The signal from the remote control may be subjected to interference from sunlight or other strong light. The power light will also blink every second for 10 minutes before switching the DIRECTV SatGo to standby mode automatically. Battery usage time is about 1 hour; battery charging time is about 8 hours. SCREWS 1 2 3 1. Open the DIRECTV SatGo case and remove the TV by lifting the TV from the DIRECTV SatGo case. 2. On the back of the TV, unscrew the two screws holding the battery cover in place. 3. Remove the cover from the battery compartment by sliding it outward. 4. Insert lithium battery pack supplied. 5. Slide the cover over the battery compartment to replace the battery cover. 6. Replace the two screws to hold the battery cover in place and complete the installation. A full charge can take as much as 8 hours. It is recommended that you charge the batteries overnight before the rst use. CAUTIONS Remove batteries when you don't use the DIRECTV SatGo system for long periods. Liquid leakage from old batteries may cause operation failure. Don't place the TV near a heater or damp place. Strong impact on the TV may cause operation failure. Finding a Suitable Antenna Site When selecting a site to obtain a satellite signal, choose a location with an unobstructed view of the southern skyno trees,

leaves, or buildings can be in the line of sight between the antenna and the satellite. A suitable site requires the antenna have an unobstructed view of the southern sky and a. This means if you live in Miami, you must have a clear line of sight to the southwest; if you live in San Francisco, you must have a clear line to the southeast.

Depending on where you live, the antenna should be at an elevation angle between 30 and 60 degrees. Southern states point more toward 60 degrees; northern states point more toward 30 degrees. Sat A, 101 o TIP The antenna case has an integrated compass to help you obtain the correct direction and angle based on your location. A residential DIRECTV dish can also be connected via an optional RG6 cable for inhome viewing. The AC power cable is permanently connected to the receiver. 2. Remove the soft plastic cover plug from the top of the case and lay the AC power cable into the provided groove. 3. Plug the AC power cable into a grounded 3prong outlet. 4. Replace the cable cover. For DC power 1. Remove the DC cable from the DIRECTV SatGo case. 2. Remove the TV from the DIRECTV SatGo case. 3. Connect the DC cable to the DC connector on the side of the receiver and to a DC power source such as a cigarette lighter in a car or boat. The DC power cable is not permanently connected to the TV. Note The AC and DC cables should never be plugged into a power source at the same time. You'll be guided through various selections and functions for setting up and optimizing your antenna signal and setup — including positioning your antenna and a system test. Throughout the remainder of the Guided Setup, use the arrow keys on the remote control to move to an option or desired selection and then press SELECT. Important In order to protect your TV screen from burnin a sideeffect caused when a stationary image is displayed for too long, the DIRECTV SatGo system interface automatically goes into screen saver mode, and displays a black screen with a moving logo when no key is pressed for 5 minutes or more while a stationary image is displayed on the TV. To dismiss the screen saver and return to what you were doing, press any key on the remote. Burnin may cause permanent damage to your TV and DIRECTV is not liable for any damages that may be caused to your TV.

If the antenna is not aligned to the satellite, a message displays on the screen, "Searching for Satellite." You can easily realign the antenna using the Signal Strength Meter. If you need additional support, you can use antenna coordinates to help you point your antenna towards the satellites. TIP If you have already aligned the antenna using the coordinates for your region, you do not need to reenter your ZIP code to get the coordinates for your location. Only if you leave the region would you have to reenter your ZIP code to get the coordinates for the new location. Determining Antenna Coordinates Antenna coordinates Direction and Angle numbers are based on the ZIP code of your location. You can use these coordinates when aligning your antenna to the satellites. 1. Turn on the DIRECTV SatGo, press the POWER button on the TV display. 2. Select Repeat Satellite Setup in the Satellite menu. The ANTENNA INST ALLA TION screen menu appears. 3. Select the antenna type Round 1 or 2 LNB. 4. Enter the ZIP code of your location. The appropriate direction azimuth and angle elevation display on the screen. 5. Write down the antenna coordinates that display Direction and Angle on the line below each illustration. An audible beep sounds and the beeps become faster as your signal strength becomes stronger. d. Once you scan and obtain the optimal signal strength 6070%, stop. Write down the actual angle and duration from the compass on the compass label included with the DIRECTV SatGo. TIP You may want to rotate the antenna past the peak signal a couple of times to make sure you stop on the strongest signal. e. Press and hold the Signal button on the receiver to exit and watch live TV. You have now successfully set up the DIRECTV SatGo and are receiving the DIRECTV satellite signal. 3. On the Signal Strength screen, Highlight Done and press SELECT. Moving the antenna after attaining signal lock may cause the antenna to lose signal lock and require you to realign the antenna.

Note that the back panels of your equipment may not exactly match those illustrated. TIP When working with cables, be sure to connect corresponding outputs and inputs Video OUT to V ideo IN,

Right Audio OUT to Right Audio IN, etc.. Never connect an IN to an IN or an OUT to an OUT. Always match the color of the plug to the same color of the jack. In the event you are directed to replace the access card, please follow the steps below 1. Locate the access card case below the remote control compartment in the receiver 2. Remove the access card door and remove the preinstalled access card. 3. Replace the access card with the new one provided by DIRECTV. Make sure the side with the metal contact is facing toward the receiver when installed. You may get an onscreen message that says, "Please insert access card" if the card is not correctly inserted. Note The access card should only be removed when replacing the card with a new one provided by DIRECTV or your program provider. The TV will turn on. 3 The first screen will allow you to select a language. Using the arrow keys on the remote control, move to the language you prefer and press SELECT. 4 You will see a Welcome screen. If you've set up your antenna, you'll be guided through various functions for optimizing your signal and setup — including positioning your antenna and a system test. After these setup procedures are complete, you'll see the Satellite Data Acquisition screen, as the receiver gathers information from the satellite for the onscreen program guide. Next, you'll be given the opportunity to set up your phone connection, as well as program your remote to control other equipment, such as your DVD player. Just follow the screen instructions and you'll be ready to watch in no time.

IMPORTANT In order to protect your TV screen from burn-in, a side effect caused when a stationary image is displayed for too long, the TV interface automatically goes into screen saver mode, and displays a black screen with a moving logo when no key is pressed for 5 minutes or more while a stationary image is displayed on the TV. Burn-in may cause permanent damage to your TV. **TIP** You may decide to set up, change or adjust some of the settings later. When you're ready, press MENU on your remote control, press SELECT on Settings and then select Setup. Then go to Setup and press SELECT. When you're ready, just call 1800DIRECTV 18004944388 and pick the programming package that's right for you. To access the channel of your choice, simply key in its numbers on your remote control the channel will appear in a few seconds, or press ENTER after the numbers and it will appear right away. You can also navigate to different channels through the Guide. Use the black keys on the left side of your remote control to adjust volume up or down VOL or mute the sound MUTE. The black keys on the right side can take you to the next channel numerically up or down CHAN, or jump to the previous channel you watched PREV. The Channel Banner Any time you tune to a channel, you'll see the channel banner appear across the top of the screen. Three states Locked, unlocked and temporarily unlocked. Music Channels Your DIRECTV service includes dozens of enjoyable, continuous, commercial free music channels with something for every taste. Tune to these just as you would to any channel. You'll see a special Channel Banner that initially displays the channel description for example, "Alternative," "Today's Country". As each song is played, its info will appear in the banner, including song title, artist and record company. **TIP** Use the Channel Lineup included in your Welcome package to get familiar with our channel numbers.

The channel banner gives you info on the channel and show you are currently watching. To see program details at any time press INFO on your remote control press a second time to clear. Select More Info button to see additional options. **TIP** Press the GUIDE key twice to skip the Category Sort screen. Highlight an item by using the arrow keys to move LEFT, RIGHT, UP or DOWN. Press SELECT to access the information or channel. You won't miss your favorite series because it moved to a different day or time, or miss your team's playoff game because you had to work late. Just set a program to autotune and your TV will tune to it automatically when it starts. To schedule a program for autotuning with speci. A screen is displayed where you can set Autotune options for that program. Follow the onscreen instructions to set the program to autotune as you wish. 3 Select the Set Autotune button, then OK on the con. See your VCR User's Manual for information on how to set it up for scheduled or manual recording. Keep in mind, though, there is an ordering fee for those purchases placed over the phone. Pay Per View The Latest Movies, 24 Hours a Day You don't have

to go out for the best and biggest movies and special events. You'll find them listed in the Guide in the 100s, with previews on channel 100. Tune to a pay per view program or press INFO on a highlighted pay per view program. As long as your TV has been connected to a landbased phone line, you can use your remote control to order. You'll get a reminder a few minutes before the pay per view's start time. You can cancel your pay per view order for any reason as long as none of the program has been viewed. Press LIST to display the To Do List. Press SELECT on the Purchases item in the left menu. Select the desired program and follow the onscreen instructions. Once the TV Menu is displayed, use the UP and DOWN arrows on the remote control to highlight a desired menu item, then press SELECT to access that item.

Some menu items will display a submenu. To exit the TV Menu at any time, press EXIT. You can also navigate using the buttons on the TV Display Panel. The TV Menu mode will automatically time out, returning you to your program after several seconds.

Picture Picture Mode You can select the picture mode that best corresponds to your viewing requirements. 1 Press MENU to display the TV Menu. 2 Highlight Picture and press SELECT. 3 Highlight Picture Mode and press SELECT. 4 Press SELECT on a desired picture mode as followings. Use the UP or DOWN arrow keys on your remote control to reach the optimal setting. 6 Press BACK or MENU to return to the previous menu.

Color Tone You can change the color tone of the entire screen to suit your requirements. 1 Press MENU to display the TV Menu. 2 Highlight Picture and press SELECT. 3 Highlight Color Tone and press SELECT. 4 Press SELECT on a desired color tone of the followings. NOTE This is typically used for content that is natively displayed in Widescreen format.

Size 1 Press MENU to display the TV Menu. 2 Highlight Picture and press SELECT. 3 Highlight Size and press SELECT. 4 Press SELECT on a desired size of the followings. These captions are usually subtitles for the hearing impaired or translations into other languages. Check for the closed caption symbol CC on your TV

programschedule. 1 Press MENU to display the TV Menu. 2 Highlight Settings and press SELECT. 3 Highlight Closed Caption and press SELECT. 4 Press SELECT on a desired option of the followings.

Backlight Brightness You can easily adjust the brightness of the Liquid Crystal Display LCD. 1 Press Menu to display the TV Menu. 2 Highlight Settings and press SELECT. 3 Highlight Backlight Brightness and press SELECT. 4 Press SELECT on a desired option Low High

Internal Battery You can check Internal Battery level. 1 Press Menu to display the TV Menu. 2 Highlight Settings and press SELECT. 3 Highlight Internal Battery and press SELECT.

<https://ayurvedia.ch/boss-dd-20-giga-delay-manual>