

Dla-Rs20 Manual



File Name: Dla-Rs20 Manual.pdf

Size: 2502 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 3 May 2019, 15:13 PM

Rating: 4.6/5 from 749 votes.

Status: AVAILABLE

Last checked: 7 Minutes ago!

In order to read or download Dla-Rs20 Manual ebook, you need to create a FREE account.

[Download Now!](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Dla-Rs20 Manual . To get started finding Dla-Rs20 Manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

Dla-Rs20 Manual

This will enable Custom Installers or users to remotely control almost every function on these projectors. The RS232C codes shown in this guide will control the JVC DLAHD350, DLAHD750, DLAHD550, DLAHD950, DLAHD990, DLARS10, DLARS20, DLARS15, DLARS25. In some installations, there may be a requirement to confirm that the projector has carried out the command before continuing. This is particularly important when sending multiple commands. It is possible to check if the projector has carried out a command. This is useful where different actions are required depending on the current projector settings or status. To request the detailed response, taking the above example of the Power Command, we would send to the projector 3F 89 01 50 57 0A. If the projector receives the enquiry command, as a confirmation that this is the Model Status enquiry. When this enquiry is sent to the projector, the projector will respond with a 14-byte string that identifies the model numbers of the projector. Details are as follows: Model Status to confirm the current Projector Model Enquiry Command to projector 3F 89 01 4D 44 0A. Response from projector 06 89 01 4D 44. The pin connections for the projector are as follows: Pin No. All of the commands sent to the projector shown in this guide are either 7 bytes or 10 bytes long. The Acknowledgement Response Return Codes returned from the projector can be between 6 and 14 bytes long. To send an Infrared command to the projector, the required format is 73, followed by the ASCII value in hex of the command required. The ASCII values for. No other Manuals with the Exact Same Model Number and Manufacture. If you want to search this text, hold control and F, and type the word you are looking for. Garder located on the side of the cabinet. Conserve pour le futur. reference. esta informaciAn como referencia para uso ulterior. DLA RS10 Modelo NA. DLA RS10 Serial No. <http://rabotatver.ru/userfiles/admin/canon-ixus-75-user-manual.xml>

- **jvc dla rs20 manual, dla-rs20 manual.**

When this ask the service technician to perform safety checks to unit is enclosed in a space of dimensions as shown below, determine that the product is in proper operating condition. GSGV, 150 mm and above stoves, and other products including amplifiers that This product has a High Intensity January 18, 1991 The sound pressure level at the operator produce heat. Disposal of these materials may be Do not place combustibles behind the cooling fan. For Do not install the projector in a place that cannot support regulated in your community due to example, cloth, paper, matches, aerosol cans or gas its weight securely. For and above Do not look into the projection lens while the illumination could fall or overturn, possibly causing personal injury. Exposure of your eyes to the strong 200 mm light can result in impaired eyesight. This ventilation holes, etc. Do not look at the illumination lamp power source indicated on the label. But IMPROPER USE CAN RESULT IN is turned on. The illumination lamp also contains ultraviolet product dealer or local power company. This plug order not to defeat the safeguards incorporated into this impaired. TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT will fit only into a grounded power outlet. If you are unable product, observe the following basic rules for its installation, Do not drop, hit, or damage the light source lamp lamp EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. Please read these Important Safeguards unit in any way. It may cause the light source lamp to install the proper outlet. Do not defeat the safety purpose carefully before use. WARNING break and lead to injuries. Do not use a damaged light of the grounded plug. All the safety and operating instructions should be read source lamp. If the light source lamp is broken, ask your THIS APPARATUS MUST BE EARTHED. Power supply cords should be routed so that they are not before the product is operated. <http://dtysgs.com/uploads/20200904023030415.xml>

Fragments from a broken light source likely to be walked on or pinched by items placed upon or CAUTION lamp may cause injuries. The safety and operating instructions should be retained against them. Pay particular attention to cords at doors, for future reference. The light source lamp used in this projector is a high To reduce the risk of electric shock, do not remove cover. Be careful when disposing of the Refer servicing to qualified service personnel. All warnings on the product and in the operating instructions product. If anything is unclear, please consult should be adhered to. For added protection of this product during a lightning This projector is equipped with a 3 blade grounding your dealer. All operating instructions should be followed. If you are unable to insert Do not ceiling mount the projector to a place which tends Place the projector near a wall outlet where the plug can periods of time, unplug it from the wall outlet and the plug into the outlet, contact your electrician. This will prevent damage to could be broken by the vibration, possibly causing it to fall Unplug this product from the wall outlet before cleaning. FCC INFORMATION U.S.A. only or overturn, which could lead to personal injury. Do not use liquid cleaners or aerosol cleaners. Use a damp Do not overload wall outlets, extension cords, or Use only the accessory cord designed for this product to CAUTION cloth for cleaning. Changes or modification not approved by JVC could Do not use attachments not recommended by the product result in a risk of fire or electric shock. This equipment has been tested and found to comply as this causes condensation, which may result in fire, Never spill liquid of any kind on the product. Be sure to ask your dealer to install the unit e.g. with the limits for Class B digital devices, pursuant to electric shock, or other hazards.

Do not attempt to service this product yourself as opening attaching it to the ceiling since special technical Part 15 of the FCC Rules. These limits are designed to Do not place this product on an unstable cart, stand, or or removing covers may expose you to dangerous knowledge and skills are required for installation. If provide reasonable protection against harmful table. The product may fall, causing serious injury to a voltages and other hazards. Refer all service to qualified installation is performed by an unqualified person, it interference in a residential installation. This equipment child or adult, and serious damage to the product. The service personnel. PORTABLE CART WARNING a When the power supply cord or plug is damaged. symbol provided by RETAC communications. However, there is no guarantee that When the product is used on a cart, care b If liquid has been spilled, or objects have fallen on the product. Adjust only those controls that are radio or television reception, which can be determined which may cause the product and cart to covered by the Operation Manual, as an improper adjustment by turning the equipment off and on, the user is encourage overturn, damaging equipment or causing of controls may result in damage and will often require to try to correct the interference by one or more of the possible injury to the operator. S3126A extensive work by a qualified technician to restore the product following measures Slots and openings in the cabinet are to normal operation. These ensure reliable operation of a Reorient or relocate the receiving antenna. These openings f When the product exhibits a distinct change in performance a Increase the separation between the equipment and must not be blocked or covered. The openings should this indicates a need for service. receiver.

<https://www.interactivelearnings.com/forum/selenium-using-c/topic/17619/boss-me-20b-manual-espa-ol>

never be blocked by placing the product on bed, sofa, rug, When replacement parts are required, be sure the service a Connect the equipment into an outlet on a circuit different or similar surface. It should not be placed in a built in installation technician has used replacement parts specified by the from that to which the receiver is connected. Unauthorized substitutions may result in fire, electric for help. Page 3 ENGLISH Getting Upon completion of any service or repairs to this product, To allow better heat dissipation, keep a clearance between this unit and its surrounding as shown below. When this ask the service technician to perform safety checks to unit is enclosed in a space of dimensions as shown below, determine that the product is in proper operating condition. Started use

an air conditioner so that the internal and external temperatures are the same. For Preparation example, cloth, paper, matches, aerosol cans or gas lighters that present special hazards when over heated. 150 mm and above Do not look into the projection lens while the illumination lamp is turned on. Exposure of your eyes to the strong 200 mm light can result in impaired eyesight. Do not look at the illumination lamp power source indicated on the label. If you are not sure of directly by opening the cabinet while the illumination lamp the type of power supply to your home, consult your is turned on. The illumination lamp also contains ultraviolet product dealer or local power company. This plug impaired. Basic will fit only into a grounded power outlet. If you are unable Do not drop, hit, or damage the light source lamp lamp to insert the plug into the outlet, contact your electrician to unit in any way. It may cause the light source lamp to install the proper outlet. Do not defeat the safety purpose break and lead to injuries. Do not use a damaged light Operation of the grounded plug.

Fragments from a broken light source likely to be walked on or pinched by items placed upon or lamp may cause injuries. Be careful when disposing of the product. If anything is unclear, please consult For added protection of this product during a lightning your dealer. This will prevent damage to could be broken by the vibration, possibly causing it to fall the product due to lightning and power line surges. Settings Do not overload wall outlets, extension cords, or Use only the accessory cord designed for this product to convenience receptacles on other equipment as this can prevent shock. Never spill liquid of any kind on the product. Be sure to ask your dealer to install the unit e.g. Do not attempt to service this product yourself as opening attaching it to the ceiling since special technical or removing covers may expose you to dangerous knowledge and skills are required for installation. If Troubleshooting voltages and other hazards. Refer all service to qualified installation is performed by an unqualified person, it service personnel. Adjust only those controls that are covered by the Operation Manual, as an improper adjustment of controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation. Unauthorized substitutions may result in fire, electric shock, or other hazards. Page 4 1 Getting started Dear Customer, Safety Precautions Continued This apparatus is in conformance with the valid European directives and standards regarding electromagnetic POWER CONNECTION compatibility and electrical safety. POWER CONNECTION For USA and Canada only European representative of Victor Company of Japan, Limited is Use only the following power cord. JVC Technical Services Europe GmbH United Kingdom only Postfach 10 05 04 Power cord HOW TO REPLACE THE FUSE When replacing the fuse, be sure to use only a correctly 61145 Friedberg rated approved type, re fit the fuse cover.

Germany IF IN DOUBT a a CONSULT A COMPETENT ELECTRICIAN. Ensure that the power cable used for the projector is the correct type for the AC outlet in your country. Consult your product dealer. Fuse Power cord For United Kingdom For European continent countries WARNING Do not cut off the main plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or adapter or consult your dealer. If nonetheless the mains plug is cut off, dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the main supply. If a new main plug has to be fitted, then follow the instruction given below. The wire which is colored blue must be connected to the terminal which is marked with the letter N or colored black. The wire which is colored brown must be connected to the terminal which is marked with the letter L or colored red. Page 5 ENGLISH Getting Dear Customer, Safety Precautions Continued This apparatus is in conformance with the valid European directives and standards regarding electromagnetic POWER CONNECTION Started compatibility and electrical safety. POWER CONNECTION For USA and Canada only European representative of Victor Company of Japan, Limited is Use only the following power cord. JVC Technical Services Europe GmbH United

Kingdom only Postfach 10 05 04 Power cord HOW TO REPLACE THE FUSE When replacing the fuse, be sure to use only a correctly 61145 Friedberg rated approved type, re fit the fuse cover. Germany Preparation IF IN DOUBT a a CONSULT A COMPETENT ELECTRICIAN. Ensure that the power cable used for the projector is the correct type for the AC outlet in your country. Consult your product dealer. Fuse Basic Power cord Operation For United Kingdom For European continent countries WARNING Do not cut off the main plug from this equipment.

If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved Settings extension lead or adapter or consult your dealer. If nonetheless the mains plug is cut off, dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the main supply. If a new main plug has to be fitted, then follow the instruction given below. The wire which is colored blue must be connected to Others the terminal which is marked with the letter N or colored black. If you want to dispose of the product or battery, please consider the collection systems or facilities for appropriate recycling. Notice The sign Pb below the symbol for batteries indicates that this battery contains lead. Notification La marque Pb en dessous du symbole des piles indique que cette pile contient du plomb. Als u het product of de batterij wilt weggevoeren, kunt u inzamelingsystemen of faciliteiten voor een geschikte recycling gebruiken. Opmerking Het teken Pb onder het batterijsymbool geeft aan dat deze batterij lood Batterij bevat. Se si desidera smaltire questo prodotto o questa batteria, prendere in considerazione i sistemi o le strutture di raccolta appropriati per il riciclaggio corretto. Operation Nota Il simbolo Pb sotto il simbolo delle batterie indica che questa batteria contiene Batteria piombo. Hvis du Ansker at smide dette produkt eller batteri ud, bedes du overveje at bruge indsamlingssystemet eller steder, hvor der kan ske korrekt genbrug. Hvis du vil kassere dette produktet eller batteriet, skal du vurdere A bruge innsamlingssystemene eller andre muligheter for riktig gjenbruk. Merk Tegnet Pb under symbolet for batterier, viser at batteriet inneholder bly. JeAli trzeba pozbyA siA tego produktu lub ba terij, proszA. Preparation GAMMA C. TEMP a Items on the menu are described as a Selection Item a. COLOR N.

R TINT SHARP BRIGHT CONT a Conventions in this manual HIDE TEST Describes the limitations of the functions or usage. Basic Indicates good to know information. BACK MENU CINEMA1 CINEMA2 Operation Describes operational precautions. DYNAMIC NATURAL STAGE Buttons to be used are colored in a darker shade. P13 Indicates relevant pages for reference. The power cord supplied varies depending on the destination. Settings For the US market X1 Power Cord For USA 2m Remote Control For the EU market X2 Troubleshooting Power Cord AAA size Batteries For UK 2m for operation confirmation Power Cord For European continent countries 2m a Instruction manual, warranty card and other printed material are also included. Please check with your authorized dealer for details. This may cause injuries if your fingers are caught in between the gap. 3 P2 Do not let your fingers or other objects get caught in a between the lens cover while closing the cover. This can cause injuries or malfunction. Others CAUTION Do not close lens cover when projecting. When this happens, replace the batteries. Basic a Be sure to insert the end first. Load the batteries again and operate the remote control. B a As the efficiency of signals reflected from the remote control unit differ with the type of Screen screen used, operable distance may decrease. Others Remote control 1 Loading Batteries Effective Range of Remote Control Unit Page 18 Preparation 2 Selecting Connecting Devices a Do not turn on the power until connection is complete. For details, refer to the instruction manual of the device to be connected. Use an HDMI compliant cable sold separately with the HDMI logo. Using beyond the rated value will cause malfunction. Connecting via Trigger Cable Page 23 ENGLISH Getting Installing the Projector and Screen While installing, please place this unit and the screen perpendicular to each other. Failing to do so may Started increase trapezoidal distortion.

LENS a Press the button again to display HIDE image. To end Basic a The power cannot be turned

off when the image is temporarily hidden. BACK Operation Turn off the power 6 MEMO Settings While a confirmation screen is displayed About Cool Down mode a The Cool Down mode is a function to cool down the lamp for approximately 60 seconds after projection is complete. This function prevents the internal parts of the unit from deformation or damage due to Troubleshooting Blinking Red Lamp overheating of the lamp. It also prevents lamp blowout and premature shortening of lamp life. This may shorten the after it has been turned on. Start operation only after 90 seconds lamp life and cause a malfunction. time. Others a You can also press the button on the unit to turn off the power. P15 a Pull out the power plug when the unit will not be used for a prolonged time. Page 28 Basic Operation 3 Convenient Features during Projection You can change the screen size of the projected image or hide the surrounding area of an image for which quality at the outer area has deteriorated. The projected image can be set to a most appropriate screen size STANDBY ON aspect ratio . RM MH2GB Images for which quality at the outer area has deteriorated can be projected by masking hiding the surrounding area of the projected image. 1 Project the image Image for which quality at the outer area has deteriorated. 8 Masking the Surrounding Area of an Image Setting the Screen Size Page 29 ENGLISH Getting Started Mask the image 2 MEMO 1 Display the setting menu a Masking is available only when high Picture Adjust definition images are input. Natural Picture Mode Contrast 0 Brightness Preparation 000 Color MENU Tint 6500K Color Temp. Select this to give a reddish tinge to the 5800K image. 6500K Select this to have a balanced image. Only offset can be set. Select this to give a bluish tinge to the 7500K image. Select this to give a greater bluish tinge 9300K than 7500K.

High Bright Select this to get the brightest image. For normal circumstances, select this Normal setting. Gamma adjustment cannot be performed, A Set gamma to A a. a and only copy is valid. B Set gamma to B a. a Preparation C Set gamma to C a. a Three different kinds of gamma can be set according to your preferences. Correction The coefficient 1.8 to 2.6 of the gamma curve can be selected. Value The gamma curve for the colors Red, Green, Blue can be adjusted Custom 1 Gamma separately. Basic Paste Paste the copied gamma data. Return the gamma coefficients to the values 2.2 set by Correction a Reset Value a. Operation a a Normal a is suitable for normal circumstances but other settings can be selected according to your preferences. BACK BACK OK Yes No a If gamma curve is adjusted repeatedly, calculation errors will be accumulated and the gamma curve may not be able to revert back to its original form. In that case, select a Reset a. Page 34 Settings 4 Setting Menu Continued Picture Adjust 08 Advanced Adjusts the contours of the image and detailed composition of the image. Sharpness Soft 0 to 100 Sharp Adjusts the outline of image. Sharpness Detail Soft a 50 to 50 Strong Emphasizes the details of image. Enhancement Adjusts the intensity of removing RNR Soft 0 to 16 Strong image noise. On Reduces block noise. BNR Off Input signal remains unchanged. Off Input signal remains unchanged. Auto Automatically configures the input signals. Select this when the dynamic range of the input images is Standard Input 16 235. Preparation Select this when the dynamic range of the input images is Enhanced 0 255. Auto Automatically configures the input signals. Select this when the Y Cb Cr 4 4 4 video signals are YCbCr 4 4 4 input. Color Space Select this when the Y Cb Cr 4 2 2 video signals are YCbCr 4 2 2 input. RGB Select this when the RGB video signals are input. On Enables CEC communications. Control with HDMI Off Disables CEC communications.

Basic a The setting is available only if the HDMI terminal is selected. RGB Select this when the RGB video signals are input. Color Space Settings Select this when RGB video signals and sync signals are SCART input via the SCART interface for European markets. Troubleshooting 0IRE Adjusts the gradation for signals without the 7.5 IRE setup. NTSC Setup Level 7.5IRE Adjusts the gradation for signals with the 7.5 IRE setup. Adjust this only when NTSC signals are input via Video or S Video terminal. NTSC Select this when the color system is NTSC. NTSC4.43 Select this when the color system is NTSC4.43. PAL Select this when the color system is PAL. Color System PAL M Select this when the color system is PAL M. PAL N Select this when the color system is PAL N. Others SECAM

Select this when the color system is SECAM. Zoom Zooms the images. This item cannot be selected in the case of HD signals. a This setting can also be configured from the remote control. P16 a The items cannot be set in the case of PC signals. Displays the PC signal corresponding to the panel at one dot per pixel ratio. The PC 1 1 screen can be shown in the original size. Off Projects the 2.35 1 image as is. Black bands will be displayed on the top and bottom. a This setting cannot be set in the case of PC signals. The position of the image varies depending on the input signals. The image of some signals may not be fully displayed. On Over scan the top, left, bottom and right at 2.5 % each. Off Do not over scan. This setting is not available when HD signal or PC signal is input. Off No masking. Basic a Masking is available only when high definition images are input. Auto For normal circumstances, select this setting. Off Select this when you are not watching movies shot on film. This setting is not available when a progressive signal is input. Zoom Function for adjusting the lens zoom. Image Pattern Displays the image pattern in conjunction with the above setting items.

Display Display for Focus a a On for Zoom and Shift a a a a Picture of big green grids Picture of small green grids Off Do not display the image pattern. Lock Disables lens adjustment. Off Enables lens adjustment. Green Move green to left 1 to 7 Move green to right Horiz. Blue Move blue to left 1 to 7 Move blue to right Vert. Red Move red down 1 to 5 Move red up Vert. Green Move green down 1 to 5 Moves green up Vert. Blue Move blue down 1 to 5 Move blue up a The horizontal and vertical directions are reversed when the image is flipped to the left or right, or flipped up or down. Front Select this for tabletop front projection. Ceiling Mount F Select this for ceiling front projection. Rear Select this for tabletop rear projection. Ceiling Mount R Select this for ceiling rear projection. The possible positions for displaying the menu are at the four corners or at center of the screen. Off Do not display. On Display the source of input signals. Off Do not display. Normal For normal circumstances, select this setting. 150W High Select this when it is difficult to see the image in a bright room. 200W a The setting cannot be changed within approximately 90 seconds after this unit has been turned on. Off Do not activate. Off Disables the off timer. 1 hour Auto power off after 1 hour. 2 hours Auto power off after 2 hours. 3 hours Auto power off after 3 hours. Preparation 4 hours Auto power off after 4 hours. Displays the type of the current video input signal. Source If PC signal is input, this item cannot be displayed Resolution In the case of PC signal, the resolution is displayed. H Frequency In the case of PC signal, the horizontal frequency is displayed. V Frequency In the case of PC signal, the vertical frequency is displayed. Displays the bit depth color depth of the video signals input from the HDMI terminals. LENS INPUT Select picture mode 1 ASPECT LENS.AP INFO CINEMA2 CINEMA1 GAMMA C.TEMP NATURAL DYNAMIC STAGE 2 COLOR N.

R Adjust picture quality TINT Example To adjust a Contrast a CONT SHARP BRIGHT 1 Display the setting menu TEST HIDE MENU Select a Picture Adjust a a Contrast a Picture Adjust Picture Mode Natural Contrast 0 MENU BACK Brightness 000 Color Tint Select 6500K Color Temp. The following situations are not malfunctions. Power is not supplied Insert the power cord plug firmly. P26 Is the power cord disconnected. Remove the power plug when the unit is in standby mode and P49 Is the lamp cover properly shut. After that, insert the plug again. After the Cool Down mode is complete, turn on the power P27 Is the lamp in Cool Down mode again. Projected image is dark Check the lamp time on the information menu. Prepare a new lamp unit or replace as soon as possible when the P48 to 50 Is the lamp near exhaustion. The unit works when power is turned on but stops abruptly after a few minutes Are the air inlets and exhaust Remove the power plug when the unit is in standby mode and P14 to 15 remove any blocking object. After that, insert the plug again. Video image does not appear Is the correct external input Select the correct external input. P26 selected Is the AV device properly Connect the AV device properly. P18 to 21 connected. Is the power of the AV device turned Turn on the power of the AV device and play the video. P26 on Are the correct signals being Set the AV device properly. P18 to 21 output from the AV device. Is the setting of the input terminal Set COMP. P27 hidden Page 45 ENGLISH Getting The image cannot output by HDMI terminal a Control I a Is the setup of with HDM 11 Set up the a Control with HDMI function to Off a.

P35 a a a Off a function Started Even if the a Control with HDMI function is a On a, there are still some devices cannot reveal image normally.P31 a a a a 04 05 Is the image correctly adjusted. Preparation Video image is fuzzy Is the focus correctly adjusted. Adjust the focus.

P26 Is the unit placed too near or too far away Set the unit at a correct distance from the screen. P23 to 25 from the screen. Video images are missing Has setting been performed for Set Mask in the setting menu to Off a. P29 37 a a a i 19 screen mask Basic Alter the Picture Position value in the setting menu to a a P36 17 Is the display out of position.Operation Remote control does not work Match the polarities or correctly when inserting P17 Are batteries installed correctly.P17 Are batteries exhausted. Is there an obstructive object Remove any obstructive objects. P17 between the remote control and remote sensor. Is the remote control held too far Hold the remote control closer to the sensor when Settings P17 using.Power is cut off suddenly Has setting been performed for off Set Off Timer in the setting menu to Off a. P41 a a a 35 timer Troubleshooting Others 5 Page 46 Troubleshooting 5 What to Do When these Messages Are Displayed Message Cause Details No device is connected to the input terminal. COMP. The input terminal is connected but there is no signal. No Input Input the video signals. A video signal that cannot be used in this unit has been input.This message is displayed when the accumulated lamp time has exceeded 1900 hours. Lamp replacement Get ready a new lamp unit and replace as soon as possible. Reset the Back BACK lamp time after replacing the lamp. 0 P48 to 5 6 Page 47 ENGLISH Getting About Warning Indicators The accumulated lamp time or warning mode of this unit is displayed by the indicators. Started For information on indicator display during normal operation, see Controls and Features. 4 P1 a a Interval Indicator Blinking Blinking No. After the cooling fan has stopped, pull out the power plug from the power outlet. Then, follow the procedures below. No. Check Action Check that an impact shock has not occurred during operation.Turn on the power again.Check that nothing is blocking the air inlets.

<https://www.becompta.be/emploi/boss-me-20b-manual-espa-ol-0>