

### Doro PhoneEasy® 620

English (US)



**File Name:** Doro Phone Manual 620.pdf

**Size:** 3796 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 3 May 2019, 20:49 PM

**Rating:** 4.6/5 from 582 votes.

**Status:** AVAILABLE

Last checked: 17 Minutes ago!

**In order to read or download Doro Phone Manual 620 ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Doro Phone Manual 620 . To get started finding Doro Phone Manual 620 , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



## Book Descriptions:

# Doro Phone Manual 620

Page Count 70 Charging socket 16. Headset socket 17. Assistance button 18. Turn off the phone and disconnect the charger before removing the battery cover. Install the SIM card, memory card and the battery. The SIM and memory card holders are located inside the battery compartment. 12345 1. Remove the battery cover and the battery if it is already installed. 2. Optional Insert the memory card into the slot under the SIM card holder. Make sure that the memory card contacts are facing inwards and push the card in, until you hear a click. Take care not to scratch or bend the contacts on the card. To remove or replace the card, push the card in until you hear a click and then pull the card out. 3. Insert the SIM card by gently sliding it into the holder. Make sure that the SIM card's contacts are facing inwards and that the cut off corner is pointing downwards. Take care not to scratch or bend the contacts on the SIM card. 4. Insert the battery by sliding it into the battery compartment with the contacts facing downwards to the right. 5. Replace the battery cover. IMPORTANT! Use only compatible memory cards for use with this device. Compatible card type microSD, microSDHC. Incompatible cards may damage the card itself, the device and corrupt data stored on the card. Depending on the market some phones may have a preinstalled memory card. 1 Connecting other accessories may be dangerous and may invalidate the phone's type approval and guarantee. When the battery is running low, is displayed and a warning signal is heard. To charge the battery, connect the mains adapter to a wall socket and to the charging socket. The battery charge indicator will be animated while charging. It takes approximately 3 hours to fully charge the battery. If the phone is turned off when the charger is connected to the phone only the battery charge indicator will be shown on the display.

Note! <https://www.generacleads.com/userfiles/93-jeep-grand-cherokee-repair-manual.xml>

- **doro phone 620 manual, doro phone manual 620, doro phone manual 620, doro phone manual 820, doro phone manual 6200, doro phone manual 620 instructions, doro phone manual 620 review, doro phone manual 620 reviews.**

To save power the LCD backlight goes off after a while. Press any button to illuminate the display. Batteries degrade over time, which means that call time and standby time will normally decrease with regular use. Save energy When you have fully charged the battery and disconnected the charger from the device, unplug the charger from the wall outlet. Get to know your phone Assistive functions The following symbols indicate information in the manual about assistive functions for Seeing Hearing Safety 2 Note! If PIN and PUK codes were not provided with your SIM card, please contact your service provider. The SIM card must now be unlocked with the PUK code Personal Unblocking Key . 1. Enter the PUK code and confirm with OK. 2. Enter a new PIN code and confirm with OK. 3. Reenter new PIN code and confirm with OK. Tip You can run the Startup wizard later if you want, see Startup wizard, p.23. Changing the language, time and date The default language is determined by the SIM card. See General, p.22 on how to change language, time and date. The external display can only display characters in black and white. Tip You can always press to return to standby. Step by step instructions The arrow indicates next action in step by step instructions. To confirm an action, press OK. See Predictive text, p.32 on how to activate predictive text. Press each key once, even if the displayed character is not the one you want. The dictionary will suggest words based on the keys you have pressed. Example, to write the word " Fred " 1. Press 3, 7, 3, 3. Alternatively, press 0 to continue with the next word. If none of the suggested words are correct, use manual input mode. 5 Abc Sentence case with predictive text ABC UPPER CASE with predictive text abc lower case with predictive text Abc Sentence case ABC

UPPER CASE abc lower case 123 Numerals 6 Delete with Clear. 2. Press to dial. Press Cancel to cancel dialling. 3. Press to end the call. <http://vanthong.net.vn/uploads/userfiles/93-lincoln-town-car-manual.xml>

Receive a call To answer an incoming call when the flip is closed, open the flip. To answer an incoming call when you have set Open to answer to Off, see Answer mode, p.30. 1. Open the flip and press to answer. Note! Loud background noises music, etc. may interfere with the sound quality. Call waiting An alert tone is heard if there is an incoming call while talking. Tip Call waiting must be activated, see Call setup, p.30. 9 1. selection buttons have multiple functions. The current key function is shown above the selection button on the display. If the identity of the caller is withheld, Unknown is displayed. Headset When a headset is connected, the internal microphone in the phone is automatically disconnected. If available, use the answer key on the headset to answer and end calls. CAUTION Using a headset at high volume may damage your hearing. Adjust the volume level carefully when using a headset. SOS calls As long as the phone is switched on, it is always possible to place an SOS call by entering the main local emergency number for your present location followed by. Some networks accept calls to emergency numbers without a valid SIM card. Contact your service provider for more information. Assistance button IMPORTANT. Always inform recipients in the Number list that they are listed as your assistance contacts. 1 0 The assistance button allows easy access to contact your predefined help numbers Number list should you need help. The assistance function may need to be activated before use. The assistance call begins after a delay of 5 seconds. If the call is not answered within 25 seconds, the next number is dialled. Always contact the security company before using their phone number. 1 1 Phonebook The phonebook can store 300 entries with 3 phone numbers in each entry.

Create ICE contact In Case of Emergency With additional information and medical information, first responders can access information from the victims phone in case of emergency. In 1 2 All fields are optional, but the more information provided the better. See ICE In Case of Emergency, p. 15 on how to configure your ICE information. Enter the phone code and press OK to confirm. Enter the phone number of the recipient. In the event of a trauma, it is critical to have this information as early as possible to increase the chances of survival. If possible, add your relationship to your ICE contacts in the phonebook, such as "ICE Wife Mary Smith". Create and send text messages SMS Note. Before you can send any text messages SMS, you need to save your message centre number. The number to your service centre is supplied by your service provider and is usually set on the SIM card. If not, you can enter the number yourself. See Profile set, p.33. 1. Press shortcut button. Alternatively press Menu Messages. 2. Select Create new SMS. 3. Write your message, see Entering text, p.5, then press To. 4. Select a recipient from Phonebook. Alternatively, select Enter number to add recipient manually and press Done. 5. Press Add to add more recipients. Create and send picture message MMS A picture message MMS can contain text and media objects such as pictures, sound recordings and video. Both you and the recipient must have subscriptions that support picture message MMS. The settings for picture message MMS are supplied by your service provider and can be sent to you automatically via text message SMS. If not, see MMS settings, p.33 on how to set your MMS profile. 1. Press shortcut button. Alternatively press Menu Messages. 2. Select Create new MMS. 1 6 Alternatively, select Enter number to add recipient manually and press Done. 7. Press Add to add more recipients. 8. Press Send to send.

<https://www.interactivelearnings.com/forum/selenium-using-c/topic/18710/danby-refrigerator-instruction-manual>

Create and send a voice message A voice message uses the same technology as a picture message MMS. Both you and the recipient must have subscriptions that support picture message MMS. The settings for picture message MMS are supplied by your service provider and can be sent to you automatically via text message SMS. If not, see MMS settings, p.33 on how to set your MMS profile.

1. Press shortcut button. Alternatively press Menu Messages. 2. Select Create new Voice message. 3. Recording starts immediately. Press Stop when done and press Yes to save. 4. Select recipient from Phonebook. Alternatively, select Enter number to add recipient manually and press Done. 5. Press Add to add more recipients 6. Press Send to send. 17 For multiple calls related to the same number, only the most recent call is saved. Create new creates new contact in the Phonebook. Update update an existing contact in the Phonebook. 4. Press OK to confirm. 5. Press to dial. Camera You can take photos using the Camera menu. To get sharp photos, wipe the lens clean with a dry cloth. 1. Press shortcut button. Press Yes to confirm or No to return. 19 Note! Zoom may reduce image quality. All you have to do is connect a USB cable between the phone and computer. From your computer's file explorer, you can drag and drop content between your phone and the computer. Note! You might not be able to transfer some copyright-protected material. Some functionality and applications in the phone, such as the camera, may not be accessible. You can transfer files by using a USB cable on most devices and operating systems supporting a USB Mass Storage interface. Disconnect the USB cable safely 1. Make sure to enable the hardware to be safely removed. 2. Disconnect the USB cable. 21 Computer instructions may vary depending on your operating system. See the documentation of your computer's operating system for more information.

Set auto time To set the phone to automatically update the time and date according to the current time zone, select On. Automatic update of date and time does not change the time you have set for the alarm clock or the calendar. They are in local time. Startup wizard Use the Startup wizard to set some basic settings. 1. Press Menu Settings General Startup wizard. 2. Press Yes to change or No if you don't want to change. Block function You can disable functions to simplify the use of the phone. 1. Press Menu Settings General Block function. 2. Select each function you want to disable and press Off. 3. Press Done to confirm. Network setup Your phone automatically selects your service providers home network if this is within range. If not within range, you may use another network, provided your network operator has an agreement that allows you to do so. This is called roaming. Use Select network to select desired operator. 3. Press OK to confirm. IMPORTANT! If you set your phone to use GSM only or 3G only, you will not be able to make any calls, including emergency calls, or use other features requiring a network connection, if the selected network is unavailable. Network information View your current network settings. Flashlight Set the automatic switch off time for the built-in flashlight. Remember to turn it off after use. Sound Note! Silent needs to be set to Off to access Tone setup, Volume, Alert type and Extra tone. Voice mail is a network service and you may need to subscribe to it first. For more information and for the voice mail number, contact your service provider. 1. Press Menu Settings Calls Voice mail. 2. Select Empty Add. 3. Select Phonebook to add a contact from the Phonebook. Alternatively, select Manual. See Phonebook, p.12. 4. Press OK to confirm. Call voice mail 1. Press Menu Settings Calls Voice mail. 2. Press Options Call voice mail. 3. Press OK to confirm.

28 If activated reminder in the Messages settings, a reminder signal will be heard after 10 minutes if not listening to new voice mail messages. You can edit the contact information for the dedicated speed dial buttons A and B. 1. Press corresponding button. To delete a top 10 entry, select the entry in the top 10 list and press Options Delete. Tip You can also add entry from the phonebook. Select the contact and press Options Top 10. 29 Call setup This menu may vary depending on network support and subscription. Contact your service provider for more information. Call waiting 30 An alert tone will be heard if there is an incoming call while talking. Call forward You can divert calls to an answering service, or to another phone number. Set up which calls should be diverted. Call barring Your phone can be restricted to disallow certain types of calls. Note! A password is needed to apply Call barring. SMS settings Memory status 1. Press Menu Settings Messages SMS settings. 2. Select Memory status to display the percentage of memory

space used on the SIM card and in the phone memory. Phone memory can store up to 200 messages.

3. Press Back to return. 32 The number to your service centre is supplied by your service provider and is usually set on the SIM card. If the service centre number is saved on the SIM card it is shown. If not, you can enter the number yourself. Contact your service provider for more information.

1. Press Menu Settings Messages SMS settings. 2. Select Profile set Edit. 3. Enter the service centre number. Press Clear to delete. 4. Press OK to confirm. Cell broadcast You can receive messages on various topics from your service provider, such as weather or traffic conditions in a particular region. For available channels and relevant channel settings, contact your service provider. Use the options Subscribe, Cancel subscription, Add, Edit and Delete to define your channels. 3. Press OK to confirm.

MMS settings Memory status 1. Press Menu Settings Messages MMS settings. 33 Storage Picture messages MMS are saved by default in the phone memory. When the memory becomes full you will need to either delete a picture message see Inbox, Outbox and Sent, p. 18 or select to save your picture messages on the memory card. When the memory is full you will see a message when you try to send or receive a picture message. Reminder The text message SMS reminder alerts you once if you have not checked your text message or listened to your voice mail within 10 minutes from receipt. Note! With higher quality, less pictures can be stored in the internal memory. Assistance Change settings for the assistance button function. Activation Select how to activate the assistance function using the assistance button. 1. Press Menu Settings Assistance. 2. Select Activation 35 See Phonebook, p. 12. 4. Press OK to confirm. 5. Repeat until you have 5 contacts maximum. SMS A text message SMS can be sent to the contacts in the numbers list when the assistance button is pressed. Note! You must write a message if you activate the SMS function. 36 Dialling is repeated 3 times or until the call is answered, or until it is pressed by the user. If the receiver doesn't press 0 within 60 seconds the call will be disconnected and the next number in the sequence will be called. If the receiver presses 0 within 60 seconds, the call is confirmed and no further call attempts will be made assistance sequence interrupted. To enable set the function as On. Do not pair with an unknown device. 37 Even if you select Off, paired devices can still detect your device. Device name 1. Press Menu Settings Bluetooth Device name. 2. Enter the name your phone should appear with for other Bluetooth devices. 3. Press OK to confirm. Search device Search for available Bluetooth audio devices. If Bluetooth is not enabled you can enable it by pressing Yes. 1. Press Menu Settings Bluetooth Search device. 2.

Select from the list of devices and press Bond to connect. 3. When connecting to another Bluetooth device you need a shared password. Enter the password and press OK. The default phone code is 1234. You can receive phonebook contacts and contacts for speed dial keys, calendar tasks and settings for the assistance button. When activated, you don't have to do anything, it's the other person that sends information to you. Alternatively, press Manual. 4. Press. 5. Enter the number and press OK to confirm. 6. Repeat until you have 5 contacts maximum. Fixed dial FDN You can limit calls to certain numbers saved on the SIM card. Note! You can save parts of phone numbers. For example, if you save 0 1234, allows calls to all numbers starting with 0 1234. It is possible to place an SOS call by entering the main local emergency number followed by even when fixed dial is activated. When fixed dial is activated you are not allowed to view or manage any phone numbers saved on the SIM card. You are not able to send any text messages SMS either. Passwords change your passwords To change the PIN, PIN2 or the Phone code passwords 1. Press Menu Settings Security Passwords. 41 Master reset 1. Press Menu Settings Security. 2. Select Master reset to reset the phone settings. All the changes that you have made to the phone settings will be reset to default settings. 3. Enter the phone password and press OK to reset. Master clear 1. Press Menu Settings Security. 2. Select Master clear to delete phone settings and content such as contacts, number lists and messages SIM memory is not affected. 3. Enter the phone password and press OK to reset. Note! The default phone code is 1234. File manager Manage the contents and properties of

files. Only playback is possible. Additional functions Organizer The Organizer menu contains Alarm Daily reminder Calendar Notes Alarm 1. Press Menu Organizer Alarm On. 2. Enter the alarm time using the keypad. 3. Press OK to confirm.

4. For a single occurrence, select Single. For a repeated alarm, select Repeated. To edit an alarm, press Edit. To stop the alarm, press Off. Note! The alarm will work even when the phone is switched off. Do not press Yes to power on if wireless phone use is prohibited or when it may cause interference or danger. When the alarm goes off a signal will sound. Press Stop to turn off the alarm or press Snooze to repeat the alarm after 9 minutes. 43 Note! The calendar will work even when the phone is switched off. Do not press Yes to power on if wireless phone use is prohibited or when it may cause interference or danger. Daily reminder 1. Press Menu Organizer Daily reminder Add. 2. Enter time for the task, then press. 3. Enter subject. 4. Press OK to save. 44 Do not press Yes to power on if wireless phone use is prohibited or when it may cause interference or danger. Note! The reminder will work even when the phone is switched off. FM radio The FM radio has a frequency range from 87.5 to 108.0 MHz and 9 preset channels. Turning the radio on 45 The radio is turned on. The tuned frequency is displayed. 3. Select channel using or. Tip Press to return to standby mode. Tip Disconnecting the headset will also turn off the radio. Press Save when done. 3. Press OK to confirm. 46 Calculator The calculator can perform basic mathematical operations. 1. Press Menu Calculator. 2. Enter the first number. The mobile number is 0700393939. Home number 046280 50 11. Contacts already saved in the phonebook, will not be replaced. They will be duplicated. This is to avoid unintentional removal of contacts from the phonebook. Enter the phone number including the area code. This way it is easier for you to send changes later. Battery incorrectly installed Check the installation of the battery. Failure to charge the battery Battery or charger damaged Check the battery and charger.

Charger incorrectly connected to phone or power socket Check the charger connections. Standby time decreases Battery charge capacity too low Install a new battery. Too far from base station, phone is constantly searching for signal Searching the network consumes battery power. Find a place with a stronger signal, or temporarily turn off the phone. Failure to place or receive calls Call barring activated Deactivate call barring. If this does not solve the problem, contact your service provider. PIN code not accepted Wrong PIN code entered too many times Enter the PUK code to change the PIN code, or contact your service provider. 52 If it is damaged, contact your service provider. SIM card incorrectly installed Check the installation of the SIM card. Remove the card and reinstall it. SIM card dirty or damp Wipe the contact surfaces of the SIM card with a clean cloth. Failure to connect to network SIM card invalid Contact your service provider. No coverage of GSM service Contact your service provider. Weak signal Too far from base station Try again from another location. Network congestion Try calling at a later time. Echo or noise Regional problem from bad network relay Hang up and redial. This may switch to another network relay. Failure to add a contact Phonebook memory full Delete contacts to free up memory. Failure to set a function Function not supported or subscribed from network Contact your service provider. Safety instructions CAUTION The unit and the accessories can contain small parts. Keep all of the equipment out of the reach of small children. The mains adapter is the disconnect device between the product and mains power. The mains socket outlet must be close to the equipment and easily accessible. 53 Using network services may result in traffic costs. Some product features require support from the network, and you may need to subscribe to them.

Operating environment Follow the rules and laws that apply wherever you are, and always turn off the unit whenever its use is prohibited or can cause interference or hazards. Only use the unit in its normal user position. This unit complies with guidelines for radiation when it is used either in a normal position against your ear, or when it is at least 0.6 in from your body. If the unit is carried close to your body in a case, belt holder or other holder, these holders should not contain any metal,

and the product should be placed at the distance from your body specified above. Make sure that the distance instructions above are followed until the transfer is complete. Parts of the unit are magnetic. The unit can attract metal objects. Do not keep credit cards or other magnetic media near the unit. There is a risk that information stored on them can be erased. Medical units The use of equipment that transmits radio signals, for example, mobile phones, can interfere with insufficiently protected medical equipment. Consult a doctor or the manufacturer of the equipment to determine if it has adequate protection against external radio signals, or if you have any questions. If notices have been put up at health care facilities instructing you to turn off the unit while you are there, you should comply. Hospitals and other health care facilities sometimes use equipment that can be sensitive to external radio signals. Pacemakers The Health Industry Manufacturers Association recommends that a minimum separation of 6 inch be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. If you have any reason to suspect that interference is taking place, turn the phone off immediately. 54 Follow all signs and instructions. There is a risk of explosion in places that include areas where you are normally requested to turn off your car engine.

In these areas, sparks can cause explosion or fire which can lead to personal injury or even death. Turn off the unit at filling stations, and any other place that has fuel pumps and auto repair facilities. Follow the restrictions that apply to the use of radio equipment near places where fuel is stored and sold, chemical factories and places where blasting is in progress. This also applies to below decks on ships; the transport or storage of chemicals; vehicles that use liquid fuel such as propane or butane; areas where the air contains chemicals or particles, such as grain, dust or metal powder. Protect your hearing **WARNING** Excessive exposure to loud sounds can cause hearing damage. Exposure to loud sounds while driving may distract your attention and cause an accident. Listen to a headset at a moderate level, and do not hold the device near your ear when the loudspeaker is in use. Emergency calls **IMPORTANT**. Mobile phones use radio signals, the mobile phone network, the terrestrial network and userprogrammed functions. This means that connection cannot be guaranteed in all circumstances. Therefore, never rely only on a mobile phone for very important calls such as medical emergencies. Vehicles Radio signals can affect electronic systems in motor vehicles for example, electronic fuel injection, ABS brakes, automatic cruise control, air bag systems that have been incorrectly installed or are inadequately protected. Contact the manufacturer or its representative for more information about your vehicle or any additional equipment. Do not keep or transport flammable liquids, gases or explosives together with the unit or its accessories. For vehicles equipped with air bags Remember that air bags fill with air with considerable force. Do not place objects, including fixed or portable radio equipment in the area above the airbag or the area where it might expand.

Serious injuries may be caused if the mobile phone equipment is incorrectly installed and the airbag fills with air. 55 Turn off the unit before you board a plane. Using wireless telecom units inside a plane can pose risks to air safety and interfere with telecommunications. It may also be illegal. Driving while operating a mobile phone is distracting and could cause serious injury or death. Using a mobile device while driving may be distracting. These features help you to place your call without taking your attention off the road. Add an extra layer of convenience and safety to your unit with one of the many handsfree accessories available. Use of a headset or other handsfree device may be legally required. Several states have in recent years passed laws making it unlawful to operate a motor vehicle while talking on a wireless phone without use of a headset, speakerphone, or other handsfree device. County and municipal ordinances may also limit or ban wireless conversations for automobile drivers. Keep your eyes on the road. Try to plan calls when your car will be stationary. Never dial, send SMS text messages, or enter other text while you are driving. Driving while operating a mobile phone is distracting and could cause serious injury or death. 56 Make people you are talking with aware you are driving and suspend conversations that have the pot

ential to divert your attention from the road. Hearing aid compatibility Note. For hearing aid compatibility, turn off Bluetooth connectivity. Your mobile device model complies with FCC rules C63.19200-7 governing hearing aid compatibility. These rules require an M3 microphone or higher value. The M value, shown on the device box and below, refers to lower radio frequency RF emissions. A higher M value generally indicates that a device model has a lower RF emissions level, which may improve the likelihood that the device will operate with certain hearing aids.

Some hearing aids are more immune than others to interference. Please consult your hearing health professional to determine the rating of your hearing aid and whether your hearing aid will work with this device. This device is set for direct connection to telecoil-equipped hearing aids. When both the telecoil hearing aid T switch and the phone telecoil are activated, using the device with the aided ear will provide a direct connection for audio through your hearing aid. The quality of sound depends on the type of hearing aid used. You should test the device with the telecoil setting activated to determine whether your audio performance improves. TTY compatibility This unit does not support TTY signaling. If you intend to connect a TTY to the unit, this unit should not be purchased and, if already purchased, it should be returned for a refund. RF exposure information SAR This model phone meets the government's requirements for exposure to radio waves. This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency RF energy set by the Federal Communications Commission of the U.S. Government and by the Canadian regulatory authorities. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone is 5.7 This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. Use of other enhancements may not ensure compliance with FCC RF exposure guidelines.

<https://www.ziveknihy.sk/audiokniha/danby-silhouette-bar-fridge-manual>