

Dvp-Nc66K Manual



2-667-915-32(1)

File Name: Dvp-Nc66K Manual.pdf

Size: 3570 KB

Type: PDF, ePub, eBook

Category: Book

Uploaded: 21 May 2019, 17:23 PM

Rating: 4.6/5 from 713 votes.

Status: AVAILABLE

Last checked: 4 Minutes ago!

In order to read or download Dvp-Nc66K Manual ebook, you need to create a FREE account.

[**Download Now!**](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Dvp-Nc66K Manual . To get started finding Dvp-Nc66K Manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



Book Descriptions:

Dvp-Nc66K Manual

Precautions Do not turn up the volume while listening to Front panel display Guide to the Control Menu Display. Use the Control Menu to select a function. Step 3 Connecting the Video Cords. Connect this player to your TV monitor, projector. Using the PROGRESSIVE button. By using the PROGRESSIVE button on the front panel, you. Additional operations Repeating a specific portion Press CLEAR, or select. Watching frame by frame Searching by Scene The first scene of each chapter, title. Dolby Digital Karaoke format Dolby Digital format, which reproduces Playing Karaoke with Selecting the Vocals. Any Stereo Disc Karaoke Vocal Select. Pon Inserting the Applause. Effect Applause. When using the Karaoke mode, you can insert Checking the play information of Checking the information on the See "Language TV Virtual Surround Select "OFF" in step 2. Changing the Angles If subtitles are recorded on. Playing MP3 Audio. Tracks or JPEG Image 1 Press MENU. To rotate a JPEG image Setting the pace for a slide show Selecting the slides' appearance Playing DivX Video Files Settings for the Display Depending on the DVD, "43 LETTER BOX" may. Selects the picture in pause mode. Operation The JPEG image file cannot be played Selfdiagnosis Function Glossary Specifications. System General. Laser Semiconductor laser Power requirements Index. Please check your inbox, and if you can't find it, check your spam folder to make sure it didn't end up there. Please also check your spam folder. Point them out to the customer and recommend their replacement. Check leakage as described below. Leakage current can be measured by any one of three methods. The Data Precision 245 digital The "limit" indication is 0.75V, so analog meters must have an accurate low voltage scale. The Simpson 250 and Sanwa SH63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. See Fig. A. Do not touch To avoid electrical shock, do the surface. <http://finpacecuador.com/userfiles/dell-m-rbb-del4-manual.xml>

- **sony dvp-nc66k manual, dvp-nc66k manual.**

Refer servicing to qualified personnel only. Should any solid object or liquid fall into the cabinet, unplug the player and have it On cleaning checked by qualified personnel before Clean the cabinet, panel, and controls with EFFECT page 59 Selects the effects to be used for changing slides during a slide show. MODE MP3, JPEG page 58 Selects the data type; MP3 audio track AUDIO, JPEG image file IMAGE or both AUTO to be played when playing a DATA CD In order to view progressive signal 525p or 625p pictures with a compatible TV, projector, or monitor, you must use pattern C. A INPUT With this connection, select "NORMAL INTERLACE" default by pressing the PROGRESSIVE button on the front panel. Each time you press PROGRESSIVE, the display changes as follows PROGRESSIVE AUTO To return to the previous adjustment, press. All manuals on ManualsCat.com can be viewed completely free of charge. By using the Select a language button, you can choose the language of the manual you want to view. To avoid electrical shock, do The mains lead must only be This appliance is classified as a. CLASS 1 LASER product. The Refer servicing to qualified Electronic Equipment. This symbol is applicable only in European countries with separate Precautions. Safety Installing Notes About the Discs Do not touch Wipe the disc from the centre On safety. Should any solid object or liquid fall into the On power sources To disconnect the AC On placement On operation Should this occur, On adjusting volume. Do not turn up the volume while listening to On cleaning. Clean the cabinet, panel, and controls with a Do not use a commercially available On transporting the player. Before transporting the player, follow the Make sure that "NO DISC" appears on The player enters standby mode. If you have any questions or problems This Player Can Play the Following Discs..... 6. Step 2 Inserting Batteries Into

the Remote..... 14. Resuming Playback From the Point Where You Stopped the Disc
Multidisc.<http://www.shipagents.nl/uploadfiles/dell-m109s-dlp-projector-manual.xml>

Playing VIDEO CDs With PBC Functions PBC Playback..... 27. Various Play Mode Functions
Programme Play, Shuffle Play, Repeat Play. Searching for a Particular Point on a Disc Search, Scan,
Slowmotion Play. Searching by Scene PICTURE NAVIGATION..... 35. Playing Karaoke
with Any Stereo Disc Karaoke Pon..... 39. Turning the Guide Melody On and Off Guide
Melody..... 40. Viewing Information About the Disc..... 42. Checking the Playing
Time and Remaining Time..... 42 Adjusting the Playback Picture CUSTOM PICTURE
MODE..... 50. Enjoying MP3 Audio and JPEG Images..... 53. About MP3 Audio Tracks
and JPEG Image Files..... 53. Playing MP3 Audio Tracks or JPEG Image Files.....
55. Enjoying JPEG Images as a Slide Show..... 57. Using Various Additional
Functions..... 63. Locking Discs CUSTOM PARENTAL CONTROL, Setting the Display or
Sound Track Language LANGUAGE SETUP..... 68. Settings for the Display SCREEN
SETUP..... 69. About This Manual. You can also use the controls on the player if they
have Icons Meaning Following Discs RWs recorded in the following formats. DivX video files of format
conforming to ROMs, defined by ISO International. Organization for Standardization. DivX video files
of format conforming to. UDF Universal Disk Format. Example of discs that the player The player
cannot play the following discs Also, the player cannot play the following Region code.

Your player has a region code printed on the VIDEOs playback only labelled with This system is used
to DVD VIDEOs labelled will also play on If you try to play any other DVD VIDEO, the Depending on
the DVD VIDEO, there may Format of discs The disc will not play if it has not been correctly Note that
some playback functions may not work In this case, view Also some DATA This product is designed to
playback discs that Recently, various music discs encoded with Please be aware that A DualDisc is a
two sided disc product which However, since the audio material side does not Note on playback
operations of. DVDs and VIDEO CDs. Some playback operations of DVDs and. VIDEO CDs may be
intentionally set by DVDs and VIDEO CDs according to the disc Also, refer to the instructions supplied
with Copyrights. This product incorporates copyright U.S. patents and other intellectual
property Macrovision, and is intended for home and Reverse engineering or disassembly is For more
information, see the pages indicated in parentheses. Front panel. C H play button 22. D x stop
button 23. G DISC SKIP button 22. Lights up when the player outputs I remote sensor 14. J
EXCHANGE button 24. K Disc tray 22. L Front panel display 9 A DIGITAL OUT COAXIAL jack 18. C
LINE OUT VIDEO jack 15. D S VIDEO OUT jack 15. F DIGITAL OUT OPTICAL jack 18 When playing
back a VIDEO CD with Playback Control PBC 27 When playing DATA DVDs, the DVD indicator is
displayed. When playing VIDEO CDs without PBC, the VCD indicator is displayed. When playing
DivX video files, the current track is not displayed. You can adjust the lighting of the front
panel SETUP." page 70. Disc type. Lights up when you can Lights up during Repeat Play 30.
Playing Current disc. Disc numbers 23. All Discs. Repeat mode Disc type. Playing Lights up during AB
Repeat Play 31. Current playing time 43. Current disc Playing Current Disc numbers 23. All Discs
Repeat C Number buttons 26. D CLEAR button 28. E TOP MENU button 26. G O RETURN button
22 N VOCAL SELECT button 39.

O audio button 45. P subtitle button 49. T PICTURE NAVI picture navigation V MENU button 26. W
ENTER button 20. X DISPLAY button 11. Y H play button 22. Z x stop button 23 Use the Control
Menu to select a function and to view related information. Press DISPLAY You can use the Control
Menu display items for KARAOKE PON, ECHO, VOCAL SELECT. GUIDE MELODY or KEY CONTROL
when the player is in karaoke mode only. For details, Control Menu display. The Control Menu
display 1 and 2 will show different items depending on the disc type. For Example Control Menu
display 1 when playing a DVD VIDEO. Displays the scene number for VIDEO CDs. Displays the index
number for VIDEO CDs. MP3 audio track number or JPEG image file. Displays Super VCD as

“SVCD.”. Displays the date for JPEG files. Appears when the player is in karaoke mode. To turn off the display. Press DISPLAY repeatedly. Control Menu display 1Control Menu display 2Control Menu display offOptions. Current setting. Playback statusX Pause,Function name ofMenu item. Operation message. Selected item. Control Menu items. Type of disc. Currently playing disc numberItem Item Name, Function. DISC page 33. Selects the disc to be played. Selects the title, scene, or track to be played. Selects the chapter or index to be played. TRACK page 34. Selects the track to be played.Checks the elapsed time and the remaining playback time. Input the time code for picture and music searching. PROGRAM page 28. Selects the title, chapter, or track to play in the order you want. SHUFFLE page 29. Plays the title, chapter, or track in random order. REPEAT page 30. AB REPEAT page 31. Specifies the parts you want to play repeatedly. CUSTOM PICTURE MODE page 50. Adjusts the video signal from the player. You can select the picture quality that best suitsSHARPNESS page 52. Exaggerates the outline of the image to produce a sharper picture. PARENTAL CONTROL page 63. Set to prohibit playback on this player. SETUP page 67. QUICK Setup page 20.

Use Quick Setup to choose the desired language of the onscreen display, the aspect ratioCUSTOM Setup. In addition to the Quick Setup setting, you can adjust various other settings.ALBUM page 34. Selects the album that contains the MP3 audio tracks and JPEG image files to be played. FILE page 34. Selects the JPEG image file to be played. ALBUM page 34. Selects the album that contains DivX video file to be played. Selects the DivX video file to be played.The Control Menu icon indicator lights up in greenDATE page 57. Displays the date the picture was taken by a digital camera. INTERVAL page 59. Specifies the duration for which the slides are displayed on the screen. EFFECT page 59. Selects the effects to be used for changing slides during a slide show. MODE MP3, JPEG page 58. Selects the data type; MP3 audio track AUDIO, JPEG image file IMAGE or bothKEY CONTROL page 37. Changes the key to suit your vocal range. KARAOKE MODE page 36. Sets the player to karaoke mode. ECHO page 38. Sets the echo function. KARAOKE PON page 39. Enjoy karaoke with a stereorecorded disc, even if it is a nonkaraoke disc, by reducingVOCAL SELECT page 39. Selects different kind of vocals recorded on the disc. GUIDE MELODY page 40. Selects the guide melody.Hooking Up the Player. Follow steps 1 to 6 to hook up and adjust the settings of the player. Notes. Step 1 Unpacking. Check that you have the following items. Step 2 Inserting Batteries Into the Remote. You can control the player using the supplied remote. Insert two R6 size AA batteries byNotes. Doing so may cause aConnect this player to your TV monitor, projector, or AV amplifier receiver using a video cord. Select one of the patterns A through C, according to the input jack on your TV monitor,In order to view progressive signal 525p or 625p pictures with a compatible TV, projector, orA If you are connecting to a video input jackWith this connection, select “NORMAL INTERLACE” default by pressing the. PROGRESSIVE button on the front panel.

Component videoTV, projector, or AVTV, projector, or AVS VIDEO cordTV, projector, or AVYellow. White L. Red R. Yellow. Red RConnect an S VIDEO cord not supplied. You will enjoy high quality images. With this connection, select “NORMAL INTERLACE” default by pressing the. PROGRESSIVE button on the front panel. C If you are connecting to a monitor, projector, or AV amplifier. Connect the component via the COMPONENT VIDEO OUT jacks using a component videoPROGRESSIVE button on the front panel to output progressive signals. For details, see “UsingWhen connecting to a standard 43 screen TV. Depending on the disc, the image may not fit your TV screen. To change the aspect ratio, seeNote. Do not connect a VCR, etc., between your TV and the player. If you pass the player signals via the VCR, youGreen. Blue. Red. Green. RedBy using the PROGRESSIVE button on the front panel, you can select the signal format inEach time you press PROGRESSIVE, the display changes as followsNormally select this under the above condition. This automatically detects the software type, andNote that the picture will not be clear or no picture will appear if you select these settings whenSelect this if the image is not clear when you select PROGRESSIVE AUTO. Note that

the picture will not be clear or no picture will appear if you select these settings when DVD software can be divided into two types filmbased software and videobased software. Videobased software is derived from TV, such as dramas and sitcoms, and displays images at. Filmbased software is derived from filmSome DVD software contains both video and film. In order for these images to appear natural on your screen when output in progressive format,Note.

When you play videobased software in progressive signal format, sections of some types of images mayImages from the S VIDEO OUT and LINE OUT VIDEO jacks are unaffected as they are output in theSelect one of the following patterns A or B, according to the input jack on your TV monitor,This will enable you to listen to sound.For correct speaker location, see the operating instructions supplied with the connected components.TV, projector, or AVCoaxial digital cordOptical digital cord not supplied. Rear LFront LRear R. Front R. SubwooferCentreThis connection will use your TV's or stereoTV Dynamic Theatre, Dynamic, Wide. Night. Stereo amplifier receiver Standard, Night. B Connecting to a digital audioIf your AV amplifier receiver has a DolbyConnect using a coaxial or an optical digitalDolby Digital 5.1ch, DTS 5.1ch, MPEGManufactured under license from Dolby. Laboratories.Digital Theater Systems, Inc. NotesIf your AV amplifier receiver has an MPEGOtherwise, noSetup page 20. Coaxial cord. Optical cordPlug the player and TV mains lead power cord into a mains. Step 6 Quick Setup. Follow the steps below to make the minimum number of basic adjustments for using the player. To return to the previous adjustment, press.TV so that the signal from theSetup page 68.The Setup Display for selecting theThe player displays the menu andThe Setup Display for selecting theThe Setup Display for selecting the typeIf you connected an AV amplifierIf your AV amplifier receiver has a. Dolby Digital decoder, select "DOLBY. DIGITAL." Otherwise, select "DPCM."If your AV amplifier receiver has a. DTS decoder, select "ON." Otherwise,Quick Setup is finished and connectionsIf your AV amplifier receiver has an. MPEG audio decoder, set "MPEG" toPlaying Discs. Depending on the DVD or VIDEO CD, someRefer to the operating instructions suppliedThe player turns on.TV so that the signal from theTurn on the amplifier receiver andTo place other discs on the tray, press.

DISC SKIP and place the discs in theEach time you press DISC SKIP, the discThe disc tray closes. The player startsDepending on the disc, a menu mayVIDEOS, see page 26. For VIDEO CDs,To turn off the playerYou can have the player turn off automaticallyNote. Discs created on DVD recorders must be correctlyNotes on playing DTS sound tracks on aOPTICAL jack.DiscDiscsVideo and JPEG pictures only except. BACKGROUND pictures. You can move theNote. You may not be able to use the Replay or AdvancePlayback quickly or slowly withYou can listen to dialogue or sound whileDuring playback, press FAST PLAY orFAST PLAY or SLOW PLAY. To return to normal playback. Press H. Rs in VR mode only.To Operation. Select a disc Press DISC 15 on theStop Press x. Pause Press X. Resume play afterPress X or H. Go to the next disc Press DISC SKIP. Go to the next chapter,Go back to thePress. Stop play and removePress Z. Replay the previous. Press replayBriefly fast forward. PressPress ZOOMCLEAR to cancel. To OperationYou can open the disc tray while playing aThe disc tray opens and two discThe disc tray turns and another two discThe disc tray closes.While the disc tray is open,Repeat Play mode page 30, the current discNote. Do not push the disc tray to close in step 5, as youLocking the disc tray Child. Lock. You can lock the disc tray to prevent childrenWhen the player is in standby mode, pressThe player turns on and "LOCKED" appearsEXCHANGE buttons on the player and the ZChild Lock is set. To unlock the disc tray. When the player is in standby mode, press. Note. Even if you select "RESET" under "SETUP" in the. Control Menu page 68, the disc tray remainsDiscsStopped the Disc Multidisc. Resume. The player stores the point where you stoppedThe player starts playback from the pointTo play from the beginning of the disc, press xNotes. SETUP" must be set to "ON" default for thisDATA CDs, and DATA DVDs, the playerThe resume point is cleared when. DATA DVD only.

SETUP" is set to "ON" and you playback a DVD is divided into long sections of aWhen you play a

DVD which containsWhen you play DVDs that allow you to selectThe disc's menu appears on the TVThe contents of the menu vary from discIf you press the number buttons, thePress the number buttons to select theSelecting "ORIGINAL" orRecording mode have two types of titles forDVD players for editing PLAY LIST. YouThe Control Menu appears.DiscsPBCFunctionsPBCPlayback. PBC Playback Control allows you to play. VIDEO CDs interactively by following theThe menu for your selection appears.Refer to the instructions supplied with theTo return to the menu. Press O RETURN.You cannot playTo return to PBC playback, press x twice thenNote. Depending on the VIDEO CD, "Press ENTER" inIn this case,Functions Programme Play. Shuffle Play, Repeat Play, AB Repeat. Play. You can set the following play modes. The play mode is cancelled when. Creating your own programmeYou can play the contents of a disc in theThe Control Menu appears.The options for "PROGRAM" appear.The cursor moves to the title or track rowFor example, select chapter "03" of titleTitles or tracksDiscsFor example, select track "02."The programmed titles, chapters, andProgramme Play begins. When the programme ends, you canTo return to normal play. Press CLEAR, or select "OFF" after step 2. To play the same programme again, selectTo change or cancel a programmeTo cancel all of the titles, chapters, orYou can perform Repeat Play or Shuffle Play ofProgramme Play, follow the steps of Repeat PlayNotes. One Disc Repeat when you set to programme playSuper VCDs with PBC playback. Playing in random order Shuffle. You can have the player "shuffle" titles,The Control Menu appears.The options for "SHUFFLE" appear.Selected track. Set QuitShuffle Play starts. To return to normal play. Press CLEAR, or select "OFF" in step 3.Notes. Super VCDs with PBC playback. One Disc Repeat when you set to shuffle playPlaying repeatedly Repeat Play.

You can play all of the titles or tracks on aYou can use a combination of Shuffle or. Programme Play modes.The Control Menu appears.The options for "REPEAT" appear.Play.Repeat Play starts. Press CLEAR, or select "OFF" in step 3.You can set Repeat Play while the player is stopped. After selecting the "REPEAT" option, press H. Repeat Play starts. Super VCDs with PBC playback.DiscsYou can play a specific portion of a title,The Control Menu appears. REPEAT, then press ENTER. The options for "AB REPEAT"The "AB REPEAT" setting bar appears.The starting point point A is set.The set points are displayed and theTo return to normal play. Press CLEAR, or select "OFF" in step 3. Shuffle Play, Repeat Play, and Programme PlaySearching for a. Particular Point on a. Disc Search, Scan, Slowmotion. Play, Freeze Frame. You can quickly locate a particular point on aNotesDivX video file. Locating a point quickly usingYou can search for the next or previousLocating a point quickly byPress m or M while playing aH to return to normal speed. Each time youPlayback direction. Opposite directionScenePress m or M when the player isEach time you press m or MPlayback directionNotePlaying one frame at a timeWhen the player is in the pause mode, pressTo return toNotesYou can search a DVD by title or chapter, and. DATA DVD by track, index, file, or scene. As titles and tracks are assigned uniqueDATA CD or DATA DVD with JPEGThe Control Menu appears.FILE JPEG image files onlyIf you make a mistake. Cancel the number by pressing CLEAR,The player starts playback from theTo search for a scene using the time codeFor example, to find the scene at 2 hours,For details, seeNAVIGATION" page 35. NotesSceneThe following display appears.Super VCD only displays the firstThe first scene of each chapter, title, orPlayback starts from the selected scene. To return to normal play during setting. Press O RETURN or DISPLAY.

If there are more than 9 chapters, titles, or tracks, VTo display the additional chapters, titles, or tracks,Depending on the disc, you may not be able to selectUsing Karaoke. You can enjoy karaoke singing along with aYou can connect up to two microphones notSetting the player to karaokeThe player enters karaoke mode when aThe player exits from karaoke mode whenYou may also turn the karaoke mode on andControl Menu operations, see "Guide to the. Control Menu Display" on page 11. When you turn the karaoke mode on with. DVDs or Super VCDs, karaoke play isNote. When you set the player to the karaoke mode, youAdjusting the microphone. MIC connector to MIN.When a microphone is connected to the. MIC 1 or 2 connector, the player entersECHO is automatically set to

ON when a To cancel the Menu display. If howling occurs. Notes COAXIAL
connectors. Microphones Karaoke. Dolby Digital Karaoke format. Dolby Digital format, which
reproduces In the Dolby. Digital Karaoke format discs, guide melody Speaker output in normal Dolby
Digital Speaker output in Dolby Digital Karaoke You can check the audio information using When
playing a. Dolby Digital Karaoke disc, "9" appears at Example. Changing the Key Key. Control. You
can change the key to suit your vocal While playing karaoke, press one of the KEY. CONTROL
buttons repeatedly to find the key The following display appears. Front L Centre Front R. Rear L Rear
R. Accompaniment Guide vocal 1 Guide vocal 2. You can select any of these. These are To Press.